

630 Du/DuN Installation, operating, and maintenance manual

Contents

1 Declaration of conformity	5
2 Declaration of incorporation	6
3 When you unpack your pump	7
3.1 Unpacking your pump	7
3.2 Packaging disposal	7
3.3 Inspection	7
3.4 Components supplied	7
3.5 Storage	7
4 Information for returning pumps	8
5 Peristaltic pumps - an overview	8
6 Warranty	9
7 Safety notes	10
8 Pump specifications	13
8.1 Specification ratings	13
8.2 Weights	14
8.3 Pumphead options	14
9 Good pump installation practice	15
9.1 General recommendations	15
9.2 Dos and don'ts	16
10 Pump operation	17
10.1 Keypad Layout and Key IDs	17
10.2 Starting and stopping	18
10.3 Using up and down keys	18
10.4 Maximum speed	18
10.5 Change rotation direction	18
11 Connecting to a power supply	19
11.1 Conductor colour coding	20

11.2 Wiring the US NEMA module	20
11.3 Earth screening of control cables on NEMA module	20
12 Start-up check list	21
13 Control wiring	22
13.1 Upper D-connector	22
13.2 Lower D Connector	22
13.3 Standard - 25 way D: Inputs and Outputs	23
13.4 Standard - 25 way D: power supply limits	31
13.5 N - Modules Standard and SCADA	31
13.6 Standard N - Module	31
13.7 SCADA N-Module	35
13.8 Standard - 9 way D - RS232 Use	39
14 Switching the pump on for the first time	44
14.1 Selecting the display language	44
14.2 First-time start-up defaults	46
15 Switching the pump on in subsequent power cycles	48
16 Mode menu	49
17 Manual	50
17.1 START	50
17.2 STOP	51
17.3 INCREASING AND DECREASING FLOW RATE	51
17.4 MAX FUNCTION (Manual mode only)	52
18 Flow calibration	53
18.1 Setting the flow calibration	53
19 Analog mode	56
19.1 Analog calibration	57
19.2 Calibrate Input 1	58
19.3 Setting a high signal	59
19.4 Setting high flow calibration	60
19.5 Setting a low signal	61
19.6 Setting low flow calibration	62
19.7 Calibrating the scaling input	64
19.8 Setting a high signal	66

19.9 Setting high flow calibration	67
19.10 Setting a low signal	67
19.11 Setting low flow calibration	68
20 Network mode	70
20.1 Network settings	70
20.2 Protocol	70
20.3 Pump No (Pump Number)	70
20.4 Baud rate	71
20.5 Stop bits	71
20.6 Save network settings	72
21 MemoDose mode	73
21.1 To configure MemoDose	73
21.2 Set flow rate	73
21.3 Resume interrupted doses	74
21.4 Master dose	75
21.5 Manual dosing	78
22 Main menu	80
22.1 Security settings	82
22.2 General settings	93
22.3 Control settings	103
22.4 Configure outputs	106
22.5 Configure inputs	107
22.6 Help	111
23 Troubleshooting	112
23.1 Leak detection	113
23.2 Error codes	113
23.3 Technical support	114
24 Drive maintenance	115
25 Drive spares	116
26 Pumphead replacement	117
26.1 Pumphead replacement	117
27 Tube replacement	119
27.1 Continuous tubing	119

27.2 Tube elements	120
28 Ordering information	122
28.1 Pump part numbers	122
28.2 Tubing and element part numbers	123
28.3 CIP and SIP procedures	127
28.4 Pumphead spares	128
29 Performance data	132
29.1 620RE, 620RE4 and 620R performance data	132
30 Trademarks	136
31 Disclaimers	137
32 Publication history	138

Original instructions

The original instructions for this manual have been written in English. Other language versions of this manual are a translation of the original instructions

1 Declaration of conformity



Watson-Marlow Limited
Falmouth
Cornwall
TR11 4RU
England

EC Declaration of Conformity

- 530 Cased pumps (Models: S, SN, U, UN, Du, DuN, Bp, BpN, En, EnN)
630 Cased pumps (Models: S, SN, U, UN, Du, DuN, Bp, BpN, En, EnN)
730 Cased pumps (Models: SN, UN, DuN, BpN, En, EnN)
- Manufacturer:
Watson Marlow Ltd
Bickland Water Road
Falmouth
TR11 4RU
UK
- This declaration of conformity is issued under the sole responsibility of the manufacturer
- All models and versions of the 530, 630 and 730 series of cased peristaltic pump with all approved pump heads, tubing and accessories.
- The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:
Machinery Directive 2006/42/EC
EMC Directive 2014/30/EC
ROHS Directive 2015/863
- Harmonised standards used:
BS EN61010-1:2010 third edition Safety requirements for electrical equipment for measurement, control, and laboratory use Part 1: General requirements
EN61326-1:2013 Electrical equipment for measurement, control and laboratory use – EMC requirements Part 1: General requirements
BS EN 60529:1992+A2:2013 Degrees of protection provided by enclosures (IP code)
- Intertek Testing and Certification Ltd, No: 3272281, performed compliance testing to BS EN 61010-1:2010, IEC 61010-1:2010, UL 61010-1:2010 and CAN/CSA C22.2 Bo 61010-1:2010 and issued certification of compliance to these standards.

Signed for and behalf of:
Watson Marlow Ltd
Falmouth, November 2019

Simon Nicholson, Managing Director, Watson-Marlow Limited

2 Declaration of incorporation



Watson-Marlow Ltd
Falmouth
Cornwall
TR11 4RU
England

Declaration of Incorporation

In accordance with the Machinery Directive 2006/42/EC that if this unit is to be installed into a machine or is to be assembled with other machines for installations, it shall not be put into service until the relevant machinery has been declared in conformity.

We hereby declare that:

Peristaltic Pump

Series: 530, 630 and 730 cased pumps

the following harmonised standards have been applied and fulfilled for health and safety requirements:

Safety of Machinery – EN ISO 12100

Safety of Machinery – Electrical Equipment of Machines BS EN 60204-1

Quality Management System – ISO 9001

and the technical documentation is compiled in accordance with Annex VII(B) of the Directive.

We undertake to transmit, in response to a reasoned request by the appropriate national authorities, relevant information on the partly completed machinery identified above. The method of transmission shall be by mail or email.

The pump head is incomplete and must not be put into service until the machinery into which it is to be incorporated has been declared in conformity with the provisions of the Directive.

Person authorised to compile the technical documents:

Nancy Ashburn, Head of Design & Engineering, Watson-Marlow Ltd

Place and date of declaration: Watson-Marlow Ltd, 20.04.2020

Responsible person:

Simon Nicholson, Managing Director, Watson-Marlow Ltd

3 When you unpack your pump

3.1 Unpacking your pump

Unpack all parts carefully, retaining the packaging until you are sure all components are present and in good order. Check against the components supplied list, below.

3.2 Packaging disposal

Dispose of packaging materials safely, and in accordance with regulations in your area. The outer carton is made of corrugated cardboard and can be recycled.

3.3 Inspection

Check that all components are present. Inspect components for damage in transit. If anything is missing or damaged, contact your distributor immediately.

3.4 Components supplied

630 Components

- 630 pump drive unit, fitted with pumphead if specified as a pump
- The designated power cable (attached to the pump drive unit)
- A 630N module providing pump ingress protection to IP66, NEMA 4X. if a DuN.
- **Note:** the module is attached for transit, but must be removed to allow wiring up, voltage selection and fuse inspection and then re-affixed before the pump is operated.
- Product safety information booklet incorporating quick start manual

3.5 Storage

This product has an extended shelf life. However, care should be taken after storage to ensure that all parts function correctly. Please observe the storage recommendations and use-by dates which apply to tubing you may wish to bring into service after storage.

4 Information for returning pumps

Before returning products, they must be thoroughly cleaned/decontaminated. The declaration confirming this should be completed and returned to us in advance of the item being shipped.

You are required to complete and return a decontamination declaration stating all fluids that have been in contact with the equipment being returned to us.

On receipt of the declaration, we will issue a Returns Authorisation Number. We reserve the right to quarantine or refuse any equipment that is not displaying a Returns Authorisation Number.

Please complete a separate decontamination certificate for each product and use the correct form that denotes the location you wish to return the equipment to. If you have any queries then please contact us for further assistance.

5 Peristaltic pumps - an overview

Peristaltic pumps are the simplest possible pump, with no valves, seals or glands to clog or corrode. The fluid contacts only the bore of a tube, eliminating the risk of the pump contaminating the fluid, or the fluid contaminating the pump. Peristaltic pumps can operate dry without risk.

How they work

A compressible tube is squeezed between a roller and a track on an arc of a circle, creating a seal at the point of contact. As the roller advances along the tube, the seal also advances. After the roller has passed, the tube returns to its original shape, creating a partial vacuum which is filled by fluid drawn from the inlet port.

Before the roller reaches the end of the track, a second roller compresses the tube at the start of the track, isolating a packet of fluid between the compression points. As the first roller leaves the track, the second continues to advance, expelling the packet of fluid through the pump's discharge port. At the same time, a new partial vacuum is created behind the second roller into which more fluid is drawn from the inlet port.

Backflow and siphoning do not occur, and the pump effectively seals the tube when it is inactive. No valves are needed.

The principle may be demonstrated by squeezing a soft tube between thumb and finger and sliding it along: fluid is expelled from one end of the tube while more is drawn in at the other.

Animal digestive tracts function in a similar way.

Suitable applications

Peristaltic pumping is ideal for most fluids, including viscous, shear-sensitive, corrosive and abrasive fluids, and those containing suspended solids. They are especially useful for pumping operations where hygiene is important.

Peristaltic pumps operate on the positive displacement principle. They are particularly suitable for metering, dosing and dispensing applications. Pumps are easy to install, simple to operate and inexpensive to maintain.

6 Warranty

Watson-Marlow Ltd ("Watson-Marlow") warrants this product to be free from defects in materials and workmanship for five years from the date of shipment, under normal use and service.

Watson-Marlow's sole responsibility and the customer's exclusive remedy for any claim arising out of the purchase of any product from Watson-Marlow is, at Watson-Marlow's option: repair, replacement or credit, where applicable.

Unless otherwise agreed in writing, the foregoing warranty is limited to the country in which the product is sold.

No employee, agent or representative of Watson-Marlow has the authority to bind Watson-Marlow to any warranty other than the foregoing unless in writing and signed by a director of Watson-Marlow. Watson-Marlow makes no warranty of the fitness of its products for a particular purpose.

In no event:

- i. shall the cost of the customer's exclusive remedy exceed the purchase price of the product;
- ii. shall Watson-Marlow be liable for any special, indirect, incidental, consequential, or exemplary damages, however arising, even if Watson-Marlow has been advised of the possibility of such damages.

Watson-Marlow shall not be liable for any loss, damage, or expense directly or indirectly related to or arising out of the use of its products, including damage or injury caused to other products, machinery, buildings, or property. Watson-Marlow shall not be liable for consequential damages, including without limitation, lost profits, loss of time, inconvenience, loss of product pumped, and loss of production.

This warranty does not obligate Watson-Marlow to bear any costs of removal, installation, transportation, or other charges which may arise in connection with a warranty claim.

Watson-Marlow shall not be responsible for shipping damage of returned items.

Conditions

- o Products must be returned by pre-arrangement to Watson-Marlow, or a Watson-Marlow approved service centre.
- o All repairs or modifications must have been made by Watson-Marlow Ltd, or a Watson-Marlow approved service centre or with the express permission in writing of Watson-Marlow, signed by a manager or director of Watson-Marlow.
- o Any remote control or system connections must be made in accordance to Watson-Marlow recommendations.
- o All PROFIBUS systems must be installed or certified by a PROFIBUS approved installation engineer.
- o All EtherNet/IP™ systems must be installed or certified by a suitably trained installation engineer.

Exceptions

- o Consumable items including tubing and pumping elements are excluded.
- o Pumphead rollers are excluded.
- o Repairs or service necessitated by normal wear and tear or by lack of reasonable and proper maintenance are excluded.
- o Products which, in the judgement of Watson-Marlow, have been abused, misused, or subject to malicious or accidental damage or neglect are excluded.
- o Failure caused by electrical surge is excluded.
- o Failure caused by incorrect or sub-standard system wiring is excluded.
- o Damage by chemical attack is excluded.
- o Ancillaries such as leak detectors are excluded.
- o Failure caused by UV light or direct sunlight.
- o Any attempt to disassemble a Watson-Marlow product will invalidate the product warranty.

Watson-Marlow reserves the right to amend these terms and conditions at any time.

7 Safety notes

This safety information should be used in conjunction with the rest of this operating manual.

In the interests of safety, this pump and pumphead should only be used by competent, suitably trained personnel after they have read and understood the manual and considered any hazard involved. If the pump is used in a manner not specified by Watson-Marlow Ltd, the protection provided by the pump may be impaired. Any person who is involved in the installation or maintenance of this equipment should be fully competent to carry out the work. This person should also be familiar with all relevant health and safety protocols, regulations and guidance.



This symbol, used on the pump and in the manual, means: An appropriate safety instruction should be followed or caution to a potential hazard exists..



This symbol, used on the pump and in the manual, means: Do not allow fingers to contact moving parts.



This symbol, used on the pump and in the manual, means: Caution, hot surface.



This symbol, used on the pump and in the manual, means: Caution, risk of electric shock.



This symbol, used on the pump and in the manual, means: Personal Protective Equipment (PPE) must be worn.



This symbol, used on the pump and in the manual, means: Recycle this product under the terms of the EU Waste Electrical and Electronic Equipment (WEEE) Directive.



Within the 630 and 730 pumps there are thermal fuses which self-reset; if they trip, error code "Err17 Under Voltage" is displayed.





Fundamental work with regard to lifting, transportation, installation, starting-up, maintenance and repair should be performed by qualified personnel only. The unit must be isolated from mains power while work is being carried out. The motor must be secured against accidental start-up.



Some pumps weigh more than 18kg (the exact weight depends on the model and pumphead - see on the pump). Lifting should be performed according to standard Health and Safety guidelines. Finger recesses are built into the sides of the lower shell for convenience in lifting; in addition, the pump can conveniently be lifted by grasping the pumphead and (where fitted) the 'N' module at the rear of the pump.



There is a user-replaceable fuse located at the rear of the pump. Some country specific mains plugs contain an additional replaceable fuse. Fuses must be replaced with parts with the same rating.



There are no user-serviceable fuses or parts inside this pump.

Note - the mains power supply cable is supplied hardwired into the pump and is not customer replaceable.

Observe voltage selector switch setting for your region



IP66 pumps are supplied with a mains plug. The gland at the NEMA Module end of the cable is IP66 rated. The mains plug at the opposite end of the cable is NOT IP66 rated. It is the user's responsibility to ensure that the connection to the mains supply is IP66 rated.

This pump must be used only for its intended purpose.

The pump must be accessible at all times to facilitate operation and maintenance. Access points must not be obstructed or blocked. Do not fit any devices to the drive unit other than those tested and approved by Watson-Marlow. Doing so could lead to injury to persons or damage to property for which no liability can be accepted.

The pump's main plug is the disconnecting device (for isolating the motor drive from the mains supply in an emergency). Do not position the pump so that it is difficult to disconnect the mains plug.



If hazardous fluids are to be pumped, safety procedures specific to the particular fluid and application must be put in place to protect against injury to persons.



This product does not comply with the ATEX directive and must not be used in explosive atmospheres.



Ensure the chemicals to be pumped are compatible with the pumphead, lubricant (where applicable), tubing, pipework and fittings to be used with the pump. Please refer to the chemical compatibility guide which can be found at: www.wmftg.com/chemical. If you need to use the pump with any other chemical please contact Watson-Marlow to confirm compatibility.



If the Auto restart feature is enabled it may cause the pump to start as soon as power is turned on.

Auto-restart only affects operation of manual mode, network mode and memodose mode.



If Auto restart is enabled the "!" Symbol is shown on the screen to warn users that the pump may operate without any manual intervention (pump resumes with previous settings).

Do not use auto restart for more than 12 times in 24 hours. We recommend remote control where a high number of starts is required.



If the pump is configured to network mode or analog mode it will respond to remote commands at any time including immediately after power on. The "!" Symbol is shown on the screen to warn users that the pump may operate without any manual intervention (e.g. a remote setpoint could start the pump with no key press required).



There are moving parts inside the pumphead. Before opening the tool-unlockable guard or tool-unlockable track, ensure that the following safety directions are followed:



1. Ensure the pump is isolated from the mains power.

2. Ensure that there is no pressure in the pipeline.



3. If a tube failure has occurred, ensure that any fluid in the pumphead has been allowed to drain to a suitable vessel, container or drain.

4. Ensure that appropriate Personal Protective Equipment (PPE) is worn.



Primary operator protection from rotating parts of the pump is provided by the pumphead safeguard. Note that safeguards differ, depending on the type of pumphead. See the pumphead section of the manual.

8 Pump specifications

8.1 Specification ratings

Operating temperature	5 °C to 40 °C (41 °F to 104 °F)
Storage temperature	630: -25 °C to 65 °C (-13 °F to 149 °F)
Humidity (non-condensing)	80 % up to 31 °C (88 °F) decreasing linearly to 50 % at 40 °C (104 °F)
Maximum altitude	2000 m (6560 ft)
Power Rating	630: 250 VA
Supply voltage	100-120 V/200-240 V 50/60 Hz 1 pH (Subject to regional cord sets and supply)
Maximum voltage fluctuation	+/-10 % of nominal voltage. A well regulated electrical mains supply is required along with cable connections conforming to the best practice of noise immunity.
Full load current	630: <1.1 A @ 230 V; <2.2 A @ 115 V
Fuse rating	T2.5AH250V (5x20 mm)
Installation category (overvoltage category)	II
Pollution degree	2
IP	630: IP31 to BS EN 60529, if supplied with N module then IP66 to BS EN 60529. Equivalent to NEMA 4X to NEMA 250 *(indoor use - protect from prolonged UV exposure)
dB rating 	630: < 70 dB (A) @ 1 m
Control ratio	630: 0.1-265 rpm (2650:1)
Maximum speed	630: 265 rpm

8.2 Weights

630	Drive only		+ 620R, 620RE		+ 620RE4		+ 620L, 620LG	
	kg	lb oz	kg	lb oz	kg	lb oz	kg	lb oz
IP31	16.5	36 6	19.6	43 3	20.1	44 5	24.3	53 9
IP66	17.4	38 8	20.5	45 3	21.0	46 5	25.2	55 9



Some pumps weigh more than 18 kg (the exact weight depends on the model and pumphead - see on the pump). Lifting should be performed according to standard Health and Safety guidelines. Finger recesses are built into the sides of the lower shell for convenience in lifting; in addition, the pump can conveniently be lifted by grasping the pumphead and (where fitted) the module at the rear of the pump.

8.3 Pumphead options

630 pump range

620R, 620RE, 620L:



9 Good pump installation practice

9.1 General recommendations

It is recommended that the pump is sited on a flat, horizontal, rigid surface, free from excessive vibration, to ensure the correct lubrication of the gearbox and correct pumphead operation. Allow a free flow of air around the pump to ensure that heat can be dissipated. Ensure that the ambient temperature around the pump does not exceed the recommended maximum operating temperature.

The STOP key on pumps supplied with a keypad will always stop the pump. However, it is recommended that a suitable local emergency stop device is fitted into the mains supply to the pump.

Do not stack the pumps more than the recommended maximum number. When the pumps are stacked, ensure that the ambient temperature around all the pumps in the stack does not exceed the recommended maximum operating temperature.



The pump may be set up so that the direction of rotor rotation is clockwise or counter-clockwise, whichever is convenient.

Please note, however, that for some pumpheads the tube life will be greater if the rotor rotates clockwise; and that performance against pressure will be maximised if the rotor rotates counter-clockwise. To achieve pressure in some pumpheads the pump must rotate counter-clockwise.



Peristaltic pumps are self-priming and self-sealing against backflow. No valves are required in inlet or discharge line, except those specified as below.



Users must fit a non-return valve between the pump and the discharge pipework to avoid the sudden release of pressurised fluid in the event of a pumphead or tube failure. This shall be fitted immediately after the discharge of the pump.

Valves in the process flow must be opened before the pump operates. Users are advised to fit a pressure relief device between the pump and any valve on the discharge side of the pump to protect against damage caused by accidental operation with the discharge valve closed.

9.2 Dos and don'ts

- Do not build a pump into a tight location without adequate airflow around the pump.
- Do keep delivery and suction tubes as short and direct as possible - though ideally not shorter than one metre - and follow the straightest route. Use bends of large radius: at least four times the tubing diameter. Ensure that connecting pipework and fittings are suitably rated to handle the predicted pipeline pressure. Avoid pipe reducers and lengths of smaller bore tubing than the pumphead section, particularly in pipelines on the suction side. Any valves in the pipeline must not restrict the flow. Any valves in the flow line must be open when the pump is running.
- Do ensure that on longer tube runs at least one metre of smooth bore, flexible tubing is connected to the inlet and discharge port of the pumphead to help to minimise impulse losses and pulsation in the pipeline. This is especially important with viscous fluids and when connecting to rigid pipework.
- Do use suction and delivery pipes equal to or larger than the tubing diameter bore. When pumping viscous fluids use pipe runs with a bore several times larger than the pump tube.
- Do site the pump at or just below the level of the fluid to be pumped if possible. This will ensure flooded suction and maximum pumping efficiency.
- Do run at slow speed when pumping viscous fluids. Flooded suction will enhance pumping performance, particularly for materials of a viscous nature.
- Do recalibrate after changing tubing, fluid or any connecting pipework. It is also recommended that the pump is recalibrated periodically to maintain accuracy.
- Do not pump any chemical not compatible with the tube or pumphead.
- Do not run the pump with no tube or element fitted to the pumphead.
- Do not strap the control and mains cables together.
- Do ensure if your product has an N module, that the module is fitted with the seals intact and properly located. Ensure that the holes for the cable glands are properly sealed to maintain the IP/NEMA rating.

Tube selection: The chemical compatibility guide published on the Watson Marlow website is for guidance. If in any doubt about the compatibility of a tube material and the duty fluid, request a Watson-Marlow tube sample card for immersion trials.

When using Marprene or Bioprene continuous tubing, do re-tension the tube after the first 30 minutes of running.

10 Pump operation

10.1 Keypad Layout and Key IDs



HOME key

When the HOME key is pressed it will return the user to the last known operating mode. If modifying pump settings when the HOME key is pressed, it will disregard any setting changes and return you to the last known operating mode.

FUNCTION keys

FUNCTION keys, when pressed, will perform the function displayed on the screen directly above the relevant function key.

^ and v keys

These keys are used to change the programmable values within the pump. These keys are also used to move the selection bar up and down in the menus.


MODE key

To change modes or mode settings, press the MODE key. The MODE key can be pressed at any time to enter the mode menu. If modifying pump settings when the MODE key is pressed, it will disregard any setting changes and return you to the MODE menu.

10.2 Starting and stopping




10.3 Using up and down keys



10.4 Maximum speed



10.5 Change rotation direction

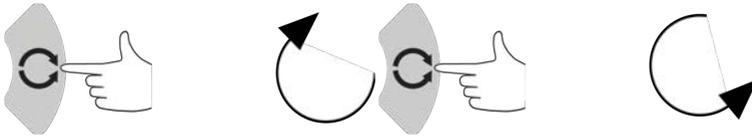

11 Connecting to a power supply

A well regulated electrical mains supply is required along with cable connections conforming to the best practice of noise immunity. It is not recommended to site these drives alongside electrical devices that may generate mains-borne noise, for example 3-phase contactors and inductive heaters.



Set the voltage selector to 115 V for 100-120 V 50/60 Hz supplies or 230 V for 200-240 V 50/60 Hz supplies. Always check the voltage selector switch before connecting to the mains supply or the pump will be damaged.

~100-120V



~200-240V



Make suitable connection to an earthed single-phase mains electricity supply.



If the pump type is one with an 'N' module, the voltage selector is not visible while the module is in place. It is mounted in the switch plate at the rear of the pump, protected from water by the 'N' module. The module must be removed to allow access to the switch plate. Do not switch the pump on unless you have checked that it is set to suit your power supply by removing the module and inspecting the switch and then refitting the module.



1.



2.



3.



4.



We recommend using a commercially available supply voltage surge and/or noise suppression where there is excessive electrical noise.



Ensure that all power supply cables are adequately rated for the equipment. Only use with supplied power cable.



The pump must be positioned so that the disconnection device is easily accessible when the equipment is in use.



IP66 pumps are supplied with a mains plug. The gland at the NEMA Module end of the cable is IP66 rated. The mains plug at the opposite end of the cable is NOT IP66 rated. It is your responsibility to ensure that the connection to the mains supply is IP66 rated.

11.1 Conductor colour coding


Conductor type	European colour	North American colour
Line	Brown	Black
Neutral	Blue	White
Ground	Green/Yellow	Green

11.2 Wiring the US NEMA module

The NEMA 4X modules fitted to 530, 630 and 730 Du, S, U and PROFIBUS cased pumps with part numbers ending with an A (xxx.xxxx.xxA) have two pairs of wiring ports. Two M16 ports are provided, together with glands to seal circular cross-section cables ranging in diameter from 4 mm to 10 mm (5/32 in to 13/32 in); two M20 ports are provided, together with glands to seal circular cross-section cables ranging in diameter from 10 mm to 14 mm (13/32 in to 9/16 in) rated for IP66 minimum.

Four adaptors are also supplied: two M16 male to 3/8 in NPT female; and two M20 male to 1/2 in NPT female. These can be used to fit flexible conduit systems where NPT threads are required.

11.3 Earth screening of control cables on NEMA module

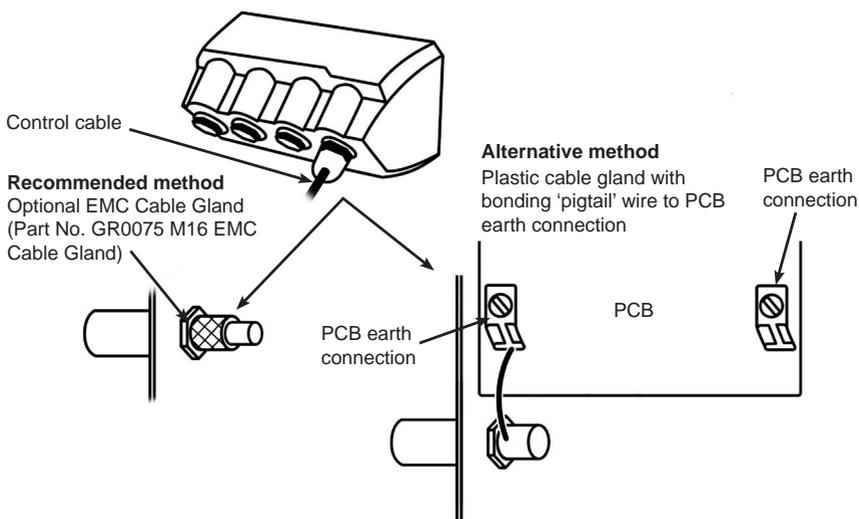

12 Start-up check list

Note: See also "Tube replacement " on page 119.

- Ensure that proper connections are achieved between the pump and suction and discharge piping.
- Ensure proper connection has been made to a suitable power supply.
- Ensure that the recommendations in the section "Good pump installation practice " on page 15 are followed.

13 Control wiring



Never apply mains power to the D-connectors. Apply the correct signals to the pins shown. Limit signals to the maximum values shown. Do not apply voltage across other pins. Permanent damage, not covered by warranty, may result.




Keep 4-20 mA and low voltage signals separate from mains power. Use separate glanded input cables. Following best EMC practice and use of shielded glands is recommended.




Ensure that multi-strand wires are terminated with a crimp suitable to the wire diameter, (applies to NEMA or SCADA model connections only, not sub-D connector type terminations). Failure to do so may result in electric shock.

13.1 Upper D-connector

Recommended control cable: 7/0.2 mm 24AWG screened. Cable screen should be earthed with a 360 deg connection to a conductive back-shell. This will be connected to pump mains EARTH via the D connector body. Mains Earth is also available on pin 1 Upper D and pin 13 Lower D.

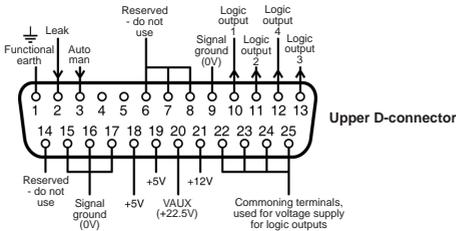

13.2 Lower D Connector

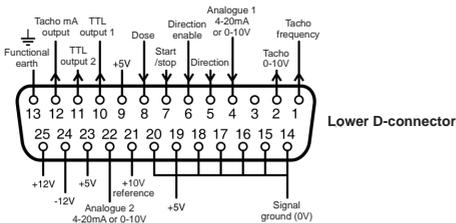


The 0V of this pump is DC isolated (floating) from the pump mains Earth. However, do not allow pump 0V to exceed 10V from the pump mains earth through connection with remote equipment, to avoid overstressing internal 0V to Earth EMI capacitors.



13.3 Standard - 25 way D: Inputs and Outputs

Note: Not all functions may be available, those available will depend on your pump model.

Key to symbols

 RUN	 INPUT	 DRY (NO LEAK)
 STOP	 OUTPUT	 WET (LEAK DETECTED)
 CLOCKWISE ROTATION	 MANUAL (KEYPAD) CONTROL	 KEYPAD DIRECTION CHANGE
 ANTI-CLOCKWISE ROTATION	 ANALOGUE (4-20mA/0-10V) CONTROL	 REMOTE DIRECTION CHANGE
 ALARM OUTPUT (OPEN COLLECTOR TO GROUND)	 START DOSE ON RISING EDGE	 ALARM PULL UP RESISTOR COMMON

Wiring the upper D connector

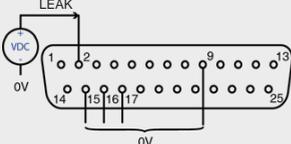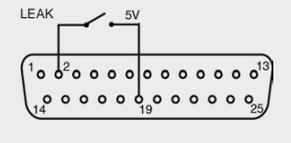Signal Name	Input or output	Configurable	Signal response
LEAK			
		Yes	<p>Leak = high</p> <p>0 = ☀</p> <p>1 [5-24V] = ⚠ ⚠</p>
			<p>Leak = low</p> <p>0 = ⚠ ⚠</p> <p>1 [5-24V] = ☀</p>

Signal Name	Input or output	Configurable	Signal response
-------------	-----------------	--------------	-----------------

AUTO/MAN

Input or output:

Configurable: No

Signal response: 0 = 1 [5-24V] =

LOGIC OUT 1

Input or output:

Configurable: Yes








Signal response: Output 1 [50V 100mA] =

LOGIC OUT 2




Input or output:



Configurable: Yes

Signal response: Output 2 [50V 100mA] =

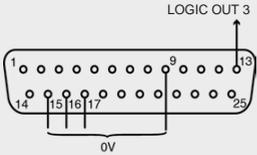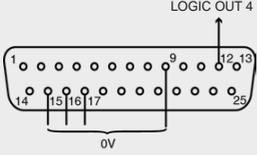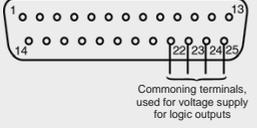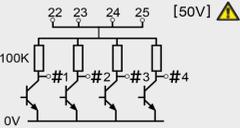Signal Name	Input or output	Configurable	Signal response
LOGIC OUT 3  		Yes	Output 3 
LOGIC OUT 4  		Yes	Output 4 
COMMON  		No	

Wiring the lower D connector

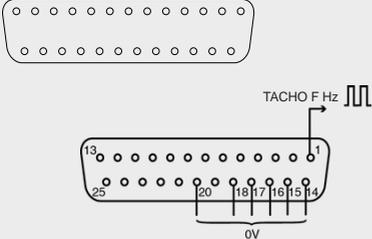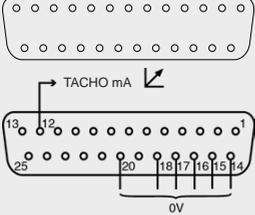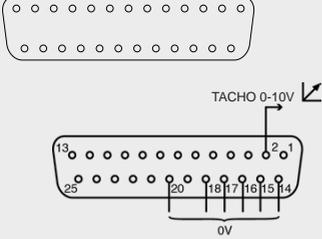Function	Input or Configurable	Signal response
<p>TACHO FREQUENCY</p> 	 <p>No</p>	<p>5V TTL 1mA = </p>
<p>TACHO</p> 	 <p>No</p>	<p>4-20 mA</p>
	 <p>No</p>	<p>0-10 V</p>

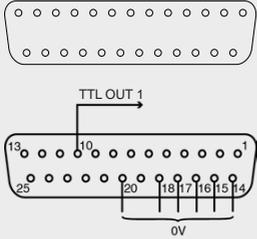
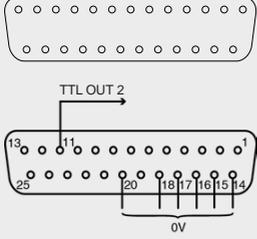
Function	Input or Configurable output	Signal response
<p>TTL 1</p> 	 <p>Yes</p>	<p>Output 1</p> <p>5V TTL 1mA =  </p>
<p>TTL 2</p> 	 <p>Yes</p>	<p>Output 2</p> <p>5V TTL 1mA =  </p>

Function

Input or Configurable output


Signal response

DIRECTION

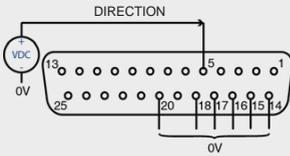


No

0 =
 1 [5-24V] =

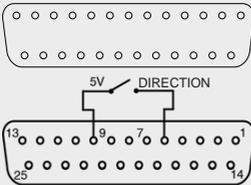

START/STOP

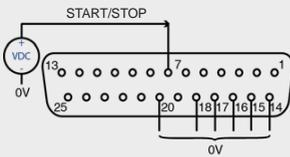


Yes

Stop = high

0 =
 1 [5-24V] =

Stop = low

0 =
 1 [5-24V] =

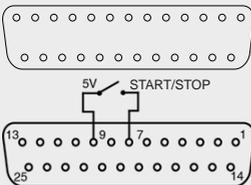


Function

Input or Configurable output


Signal response

DIRECTION ENABLE

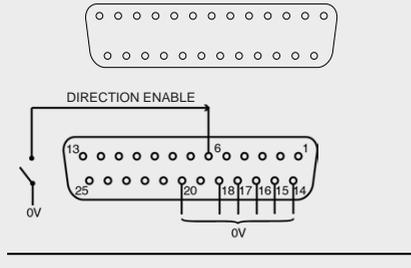


No

0 =
 1 [5-24V] =

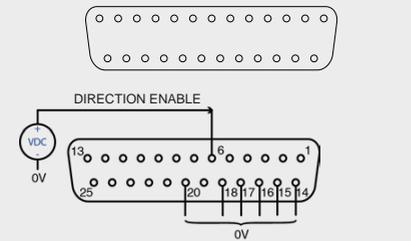


DOSE

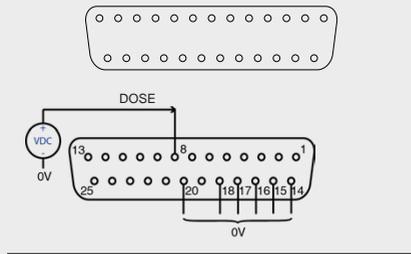


No

1 [5-24V] =
 0 =

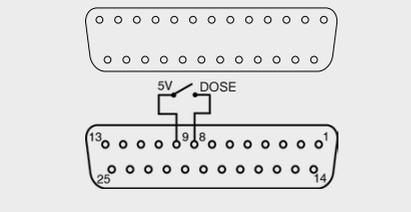


Function	Input or output	Configurable	Signal response
----------	-----------------	--------------	-----------------

ANALOG 1

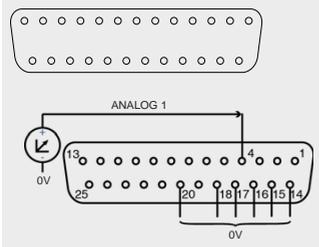

Yes


Either 0-10 V or 4-20 mA

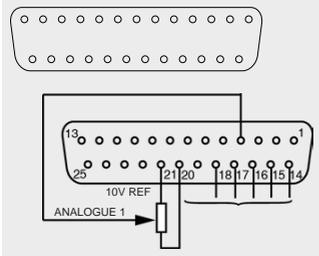

Yes

0-10 V

ANALOG 2

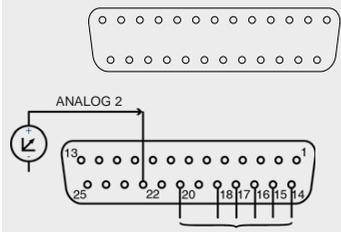

No

0-10V/4-20mA
[34K/250R] = ↗

13.4 Standard - 25 way D: power supply limits

Signal	Connector	Pin numbers	Voltage	Load
5 V Ref	Upper	18, 19	5 V @ no load	Total of all pins 10 mA max
	Lower	9, 19, 23		
12 V Ref	Upper	21	12 V @ no load	Total of all pins 10 mA max
	Lower	25		
10 V Ref	Lower	21	10 V @ no load	Minimum load 4K7 ohms
VAUX	Upper	21	Nom 22 V (18-35 V unregulated)	10 mA Nom (100 mA fused)

13.5 N - Modules Standard and SCADA



The recommended cable and cable glands must be used for the IP66 (NEMA 4X) version of the pump; otherwise ingress protection may be impaired.




Ensure that the module cover is correctly secured at all times by all screws supplied. Failure to do so may compromise the IP66 (NEMA 4X) protection.



Ensure that unused openings on the module are sealed using the blanking plugs provided. Failure to do so may compromise the IP66 (NEMA 4X) protection.

13.6 Standard N - Module

Note: Not all functions may be available, those available will depend on your pump model.

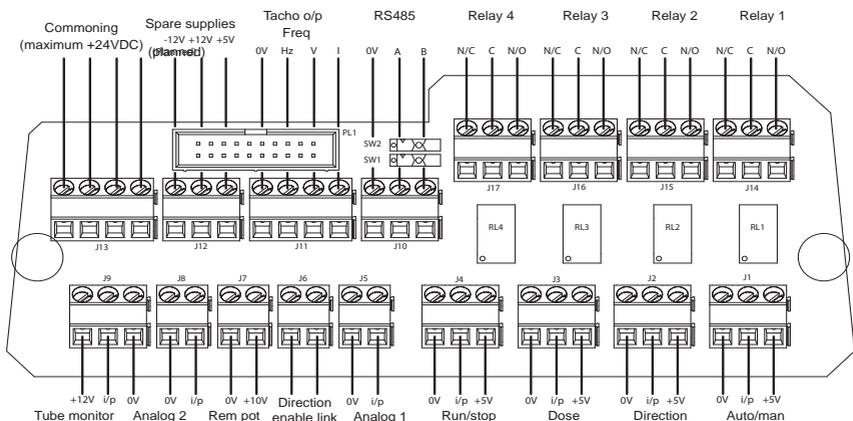

Note: It is recommended to separate the module from the pump and leave the connector PCB attached to the pump rear. Disconnect the Module ribbon from the pump by use of the ribbon eject levers on the connector board.

Recommended control cable: metric = 0.14sq mm - 2.5sq mm solid and 0.14sq mm - 1.5sq mm stranded. USA = 26AWG - 14AWG solid and 26AWG - 16AWG stranded. Cable: circular. Max/min outside diameter to ensure a seal when passed through the standard gland: 9.5 mm-5 mm. **The cable section must be circular to ensure a seal.**



Never apply mains power to the terminals within the N module. Apply the correct signals to the terminals. Limit signals to the maximum values shown. Do not apply voltage across other terminals. Permanent damage, not covered by warranty, may result. The maximum rating on the relay contacts of this pump is 30 V DC; maximum load 30 W.

Note: Also suitable for low power: ie, 1 mA at 5 V DC minimum.







Key to symbols






RUN	INPUT	DRY (NO LEAK)
STOP	OUTPUT	WET (LEAK DETECTED)
CLOCKWISE ROTATION	MANUAL (KEYPAD) CONTROL	KEYPAD DIRECTION CHANGE
ANTI-CLOCKWISE ROTATION	ANALOGUE (4-20mA/0-10V) CONTROL	REMOTE DIRECTION CHANGE
	EXTERNAL VOLTAGE INPUT	START DOSE ON RISING EDGE

Standard N Module: Input/output Connectors

Connector No.	Function	Input or output	Configurable	Signal response
J1			No	0 = 1 [5-24V] =


Connector No.	Function	Input or output	Configurable	Signal response
J2			No	0 = 1 [5-24V] =
J3			No	 1 [5-24V] = 0 =
J4			Yes	Stop = high 0 = 1 [5-24V] = Stop = low 0 = 1 [5-24V] =

Connector No.	Function	Input or output	Configurable	Signal response
J5	<p>ANALOGUE 1 0V IP</p> 		Yes	0-10V/4-20mA [34K/250R] = ↗
J6	<p>DIRECTION EN 0V 1P</p> 		No	O/C =   0 =   
J7	<p>REMOTE POT 0V 10V</p> 		No	10 V 10 mA Max
J8	<p>ANALOGUE 2 0V IP</p> 		Yes	0-10V/4-20mA [34K/250R] = ↗
J9	<p>LEAK DETECT HIGH LEAK DETECT 0V IP 12V</p>  <p>LEAK DETECT LOW LEAK DETECT 0V IP 12V</p>  <p>LEAK DETECT 0V IP 12V</p> 		Yes	<p>Leak = high 0 =  1 [5-24V] =  </p> <p>Leak = low 0 =   1 [5-24V] = </p>

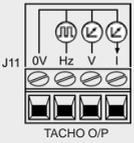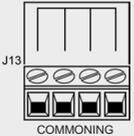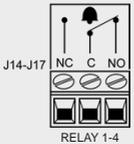Connector No.	Function	Input or output	Configurable	Signal response
J10	 <p>RS485 0V A B</p>			
J11	 <p>TACHO O/P 0V Hz V I</p>		No	Hz=5 V TTL V=0-10 V I=4-20 mA
J12	 <p>SPARE SUPPLIES 5V 12V</p>		No	Sum of all 12 V currents = 10 mA DC Max
J13	 <p>COMMONING</p>			
J14,15,16,17	 <p>RELAY 1-4 NC C NO</p>		Yes	 LOW=N/C HIGH=N/O 24 V DC MAX
SW1	 <p>SW1</p>			Switches in or out a 124R termination resistor - May be required for long cable lengths
SW2	 <p>SW2</p>			Switches in or out a filter capacitor for optional use when internal terminal is selected. May be of use if data errors occur with long lines.

13.7 SCADA N-Module

Note: Not all functions may be available, those available will depend on your pump model.

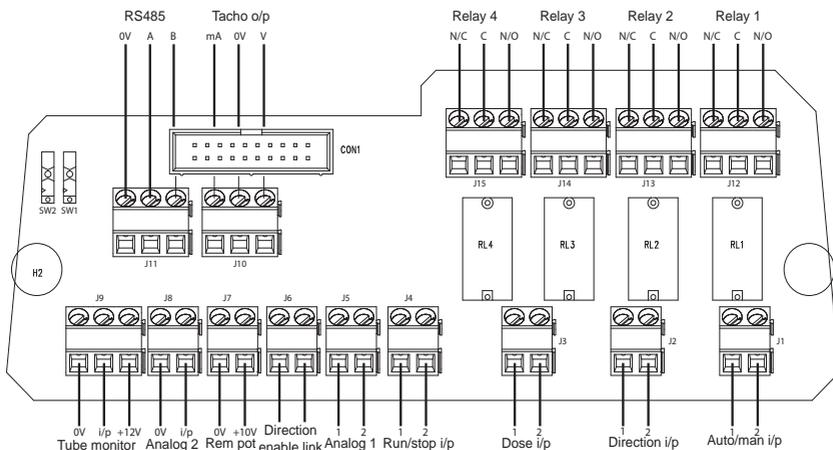

Recommended control cable: metric = 0.14sq mm - 2.5sq mm solid and 0.14sq mm - 1.5sq mm stranded. USA = 26AWG - 14AWG solid and 26AWG - 16AWG stranded. Cable: circular. Max/min outside diameter to ensure a seal when passed through the standard gland: 9.5mm-5mm. **The cable section must be circular to ensure a seal.**



Never apply mains power above 130 V AC to the terminals within the SCADA module. Apply the correct signals to the terminals shown. Limit signals to the maximum values shown. Do not apply voltage across other terminals. Permanent damage, not covered by warranty, may result.






- **130 VAC Max on Relay 1-4 terminals, Dose, Auto and Start Stop**
- **All others Max 30 VDC**







The maximum rating on the relay contacts of this pump is 1250 VA.

Key to symbols

RUN	INPUT	DRY (NO LEAK)
STOP	OUTPUT	WET (LEAK DETECTED)
CLOCKWISE ROTATION	MANUAL (KEYPAD) CONTROL	KEYPAD DIRECTION CHANGE
ANTI-CLOCKWISE ROTATION	ANALOGUE (4-20mA/0-10V) CONTROL	REMOTE DIRECTION CHANGE
	AC (ALTERNATING CURRENT) INPUT	START DOSE ON RISING EDGE

SCADA N Module: Input/output Connectors


Connector No.	Function	Input or Output	Configurable	Signal Response
J1			No	0 =  1 [110VAC] = 
J2			No	0 =  1 [110VAC] = 
J3			No	  1 [110VAC] =  0 = 
J4			Yes	<p>Stop = high</p> 0 =  1 [110VAC] =  <p>Stop = low</p> 0 =  1 [110VAC] = 
J5			Yes	0-10V/4-20mA [34K/250R] = 
J6			No	O/C =   0 =   

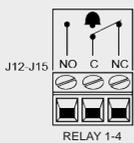Connector No.	Function	Input or Output	Configurable	Signal Response
J7	REMOTE POT 0V 10V 	← ⊖	No	10 V 10 mA Max
J8	ANALOGUE 2 0V IP 	→ ⊕	Yes	$0-10V/4-20mA$ $[34K/250R]$ = ↙
J9	LEAK DETECT 0V IP 12V  LEAK DETECT 0V IP 12V 	→ ⊕	Yes	Leak = high $0 = ☼$ $1 [5-24V] = ⚠ ⚠$ Leak = low $0 = ⚠ ⚠$ $1 [5-24V] = ☼$
J10		← ⊖	No	$0-10V$ $4-20mA$
J12,J13,J14,J15	J12-J15 NO G NC RELAY 1-4 	← ⊖	Yes	 LOW=N/C HIGH=N/O 110 VAC MAX
SW1	SW1 			Switches in or out a 124R termination resistor - May be required for long cable lengths

Connector No.	Function	Input or Output	Configurable	Signal Response
SW2				Switches in or out a filter capacitor for optional use when internal terminal is selected. May be of use if data errors occur with long lines.

13.8 Standard - 9 way D - RS232 Use

Recommended control cable: 7/0.2mm 24AWG screened, circular, up to 25 core. The cable screen should be earthed with a 360 deg connection to a conductive back-shell.

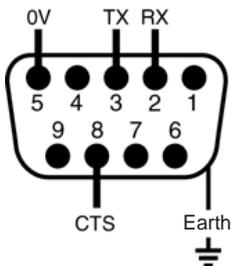

Network commands and protocol

The pump allows you to choose whether you would like to use the historical basic protocol or the new enhanced protocol.

New enhanced protocol

Command strings have a comma separated format, without spaces and with an optional checksum, enclosed within a start of message (SOM) indicator and an end of message (EOM) indicator.

SOM,address,command,parameter,(parameter,parameter,...)checksum,EOM

e.g. <1,SP,1032,CS>

Message structure - additional definitions

SOM <

Address range: 1 to 16 for RS232 and 1 to 32 with RS485, leading zeros are not required but can be present

EOM >

Command	Parameter	Meaning
DO	Num1, or Num1,Num2	Set and run one dose of Num1 tacho pulses. Note that "Num2", is optional and specifies the number of drip tacho pulses (maximum 11000) (see Note 2)

Command	Parameter	Meaning
TC	-	Clear the cumulative tachometer count
SP	Num1	Set speed to Num1 RPM (Range 1 - 9999 in steps of 1)
SI	-	Increment the speed by 1 RPM
SD	-	Decrement the speed by 1 RPM
GO	-	Start running
ST	-	Stop running
RC	-	Change direction
RR	-	Set direction to clockwise
RL	-	Set direction to counter-clockwise
RS	-	Return status (see Note 3)
RT	-	Return the total deci pump revolutions count
W	"Line1","Line2","Line3","Line4",	Display text on 1 to 4 lines (lines 2,3 and 4 are optional so that between 1 and 4 lines can be displayed). The text must be enclosed by a comma, as shown. The allowable characters are: ! # % ' () + , - . / 0 1 2 3 4 5 6 7 8 9 ; : < = > ? A B C D E F G H I J K L M N O P Q R S T U V W X Y Z a b c d e f g h i j k l m n o p q r s t u v w x y z
ZY	-	Return) for stopped or 1 for running. This is returned to the sender in the following format: SOM, address,) or 1, checksum, EOM e.g. <1,0,47>

NOTES: New enhanced protocol

Note 1:

The Checksum is calculated as the 1's complement of the least significant 8 bits of the unsigned sum of the individual bytes that form the message (excluding the checksum, SOM and EOM indicators) converted into two ASCII-HEX characters. The sender can choose to omit the checksum and can instead enter ??

Note 2:

The correlation between the tachometer pulses and the motor rotation is fixed and provides a measurable and absolute way of monitoring the number of revolutions of the gearbox output shaft - 10 pulses per revolution. This in turn allows the count to be equated to the amount of fluid dispensed - assuming that the pumphead type and tube size are known.

Note 3:

The status is returned to the sender in the following format:
SOM,address,pumptype,ml/rev/pumphead,tubesize,speed,CW or CCW,pumpnumber,pump revs count,0 or 1(for stopped or running),Leak detect (0=Inactive, 1=Active),Auto/Manual(0=Manual, 1=Auto),Adapter detect(0=not fitted, 1=fitted),Direction enable(0=disabled, 1=enabled),Spare1 input4 (0=inactive, 1=active),Spare2 input5 (0=inactive, 1=active),checksum,EOM e.g.
<1,530Du,15.12,520R,9.6,220.0,CW,123456789,12345,1,0,0,0,0,0,0,CS>

Note 4:

If the pump network ID in the command is replaced with all zeros, this indicates a broadcast message. In this case, the 'RS', 'RT' and 'ZY' commands are not executed.

Note 5: Protocol Timeout

The protocol features a timeout limit that is pre-calculated for each baud rate. Once a start of message is received a timer will start. If the end of message is not received before the time expires, the message will be deleted and the pump will continue to wait for the next message.

Historical basic protocol

Command	Parameter	Meaning
nDO	xxxxxxxxx <,yyyyy>	Set and run one dose of xxxxxxxxxx tachometer pulses, with optional drip of yyyyy (maximum 11,000) tachometer pulses. See Note 1
nTC	-	Clear the cumulative tachometer count
nSP	xxxx	Set speed to xxx.x rpm
nSI	-	Increment the speed by 1 rpm

Command	Parameter	Meaning
nSD	-	Decrement the speed by 1 rpm
nGO	-	Start running
nST	-	Stop running
nRC	-	Change direction
nRR	-	Set direction to clockwise
nRL	-	Set direction to counter-clockwise
nRS	-	Return status. See Note 2
nRT	-	Return the total deci pump revolutions count
nW	line1~line2~line3~line4@	Display text on 1 to 4 lines with ~ as the line delimiter. Terminated by the @ character. See Note 3
nZY	-	Return 0 for stopped or 1 for running.

NOTES: Historical basic protocol

Note 1:

The correlation between the tachometer pulses and the motor rotation is fixed and provides a measurable and absolute way of monitoring the number of revolutions of the gearbox output shaft - 10 pulses per revolution. This in turn allows the count to be equated to the amount of material dispensed - assuming that the pumthead type and tube size are known.

Note 2:

The status is returned to the sender in the following format:
 SOM,address,pumptype,ml/rev/pumthead,tubesize,speed,CW or CCW,pumpnumber,pump revs count,0 or 1(for stopped or running),Leak detect(0=Inactive, 1=Active),Auto/Manual(0=Manual, 1=Auto),Adapter detect(0=not fitted,1=fitted),Direction enable(0=disabled, 1=enabled),Spare1 input4 (0=inactive, 1=active),Spare2 input5 (0=inactive,1=active),checksum,EOM e.g.
 <1,530Du,15.12,520R,9.6,220.0,CW,123456789,12345,1,0,0,0,0,0,0,CS>

Note 3:

1 to 4 lines of text can be written with ~ as the line delimiter and @ as the message end.

i.e., 1W520Du@ and 1W520Du~@ are both valid commands

NOTES: Historical basic protocol

Note 4:

In all cases, 'n' can be any number from 1 to 16 inclusive, and by exception the # symbol can be used as an all-drives command; but not with the RS, RT or ZY commands, as the results would be indeterminate.

14 Switching the pump on for the first time

Power up the pump. The pump displays the start-up screen with the Watson-Marlow Pumps logo for three seconds.



14.1 Selecting the display language

1. Use the \wedge/\vee keys to select your chosen language, and press **SELECT**.



2. Your selected language will now be displayed on screen. Choose **CONFIRM** to continue. All text will now appear in your chosen language.



3. Choose **REJECT** to return to the language choice screen. This then proceeds to the home screen.



14.2 First-time start-up defaults

The pump is preset with operational parameters as shown in table below.

Parameter	630 default
Language	Not set
Default mode	Manual
Default manual speed	165 rpm
Pump status	Stopped
Max speed	265 rpm
Direction	CW
Pumphead	620R
Tube size	15.9 mm
Tube material	Bioprene
Flow calibration	0.061 l/rev
Flow units	rpm
SG value	1
Keypad lock	Disabled
Auto-restart	OFF
Analog signal type	mA
Analog scaling type	mA
Analog min current	5 mA
Analog max current	19 mA
Analog min flow rate/rpm	0 rpm
Analog max flow rate/rpm	265 rpm
Beeper	ON
Security code	Not set
MemoDose flow rate	Mid flow rate of chosen pumphead
MemoDose volume	100 ml
Pump number baud rate	9600
Stop bits	2
Remote start/stop input	High = stop
Leak detector input	High = leak
Input 4	Disabled
Input 5	Disabled
Output 1	Run/stop
Output 1 - status	High = run
Output 2	Direction

Parameter	630 default
Output 2 - status	High = CW
Output 3	Auto/man
Output 3 - status	High = auto
Output 4	General alarm
Output 4 - status	High = alarm

The pump is now ready to operate according to the defaults listed above.

Note: The display background colour changes according to running state as follows:

- White background indicates pump stopped
- Grey background indicates pump running
- Red background indicates error or alarm

All operating parameters may be changed by means of key-presses (see section "Pump operation " on page 17).

If the Auto restart feature is enabled it may cause the pump to start as soon as power is turned on.



Auto-restart only affects operation of manual mode, network mode and memodose mode.

If Auto restart is enabled the "!" Symbol is shown on the screen to warn users that the pump may operate without any manual intervention (pump resumes with previous settings).

Do not use auto restart for more than 12 times in 24 hours. We recommend remote control where a high number of starts is required.



If the pump is configured to network mode or analog mode it will respond to remote commands at any time including immediately after power on. The "!" Symbol is shown on the screen to warn users that the pump may operate without any manual intervention (e.g. a remote setpoint could start the pump with no key press required).

15 Switching the pump on in subsequent power cycles

Subsequent power-up sequences will jump from the start-up screen to the home screen.

- The pump runs a power-on test to confirm proper functioning of the memory and hardware. If a fault is found, an error code is displayed.
- The pump displays the start-up screen with the Watson-Marlow Pumps logo for three seconds followed by the home screen
- Start-up defaults are those in place when the pump was switched off last

Check that the pump is set to operate as you require it. The pump is now ready to operate.

All operating parameters may be changed by means of key-presses (see "Pump operation " on page 17).

Power interruption

This pump has an auto restart feature (which only affects manual mode, network mode and memodose operation) which, when active, will restore the pump to the operating state it was in when power was lost.

Stop/start power cycles

Do not power up/power down the pump more than 12 times in 24 hours, whether manually or by means of the auto-restart facility (which only affects manual mode, network mode and memodose operation). We recommend remote control where a high frequency of power cycles is required.

If the Auto restart feature is enabled it may cause the pump to start as soon as power is turned on.

Auto-restart only affects operation of manual mode, network mode and memodose mode.



If Auto restart is enabled the "!" Symbol is shown on the screen to warn users that the pump may operate without any manual intervention (pump resumes with previous settings).

Do not use auto restart for more than 12 times in 24 hours. We recommend remote control where a high number of starts is required.



If the pump is configured to network mode or analog mode it will respond to remote commands at any time including immediately after power on. The "!" Symbol is shown on the screen to warn users that the pump may operate without any manual intervention (e.g. a remote setpoint could start the pump with no key press required).

16 Mode menu

Press **MODE** to display the Change mode menu.

Use the \wedge and \vee keys to scroll through the available modes.

- Manual(default)
- Flow calibration
- Analog
- Network
- Memodose
- CANCEL



Use **SELECT** to choose mode. Use the right hand function key to alter mode settings.

17 Manual

All settings and functions of the pump in manual mode are set and controlled by means of key-presses. Immediately after the start-up display sequence detailed in: "Switching the pump on in subsequent power cycles " on page 48, the manual mode home screen will be displayed unless auto restart is enabled.

Auto restart is a feature which only affects pump operation when the pump is set to manual mode, network mode and memodose mode. If Auto Restart is enabled and the pump is operating in any of these modes, the pump will return to the last known settings from that operating mode when the power is re-applied. When the pump is running it displays an animated clockwise arrow. In normal operation, the direction of flow is into the bottom port of the pumphead and out of the top port.

If an exclamation mark (!) is displayed, it indicates that the pump could automatically restart at any time. In manual mode network mode and memodose mode, the 'Auto restart' behaviour is configurable. If a padlock icon shows, it indicates that the keypad lock is on.

17.1 START



Starts the pump at the current flow displayed, and the display background changes to grey. If the pump is already running, pressing this has no effect.

17.2 STOP



Stops the pump. The display background changes to white. If the pump is not running pressing this has no effect.

17.3 INCREASING AND DECREASING FLOW RATE



Using the \wedge and \vee keys will increase or decrease the flow rate.

Decreasing flow rate

- A single key press will decrease flow rate by the least significant digit of the chosen flow rate unit.
- Repeat key presses as required to achieve the desired flow rate.
- Hold down the key for flow rate scrolling.

Increasing flow rate

- A single key press will increase flow rate by the least significant digit of the chosen flow rate unit.
- Repeat key presses as required to achieve the desired flow rate.
- Hold down the key for flow rate scrolling.

17.4 MAX FUNCTION (Manual mode only)



- Press and hold the **MAX** key to run at maximum flow.
- Release the key to stop the pump.
- The volume dispensed and time elapsed are displayed while the **MAX** key is pressed and held.

18 Flow calibration

This pump displays flow rate in ml/min.

18.1 Setting the flow calibration

Using the \wedge \vee keys, scroll to **Flow calibration** and press **CALIBRATE**.



Using the \wedge \vee keys, enter the maximum flow rate limit and press **ENTER**.



Press **START** to begin pumping a volume of fluid for calibration.



Press **STOP** to stop pumping fluid for the calibration.



Use the \wedge / \vee keys to enter the actual volume of fluid pumped.



To accept the new calibration press **ACCEPT** or **RE-CALIBRATE** to repeat the procedure. Press **HOME** or **MODE** to abort.




The pump is now calibrated.

19 Analog mode

In this remote operating mode the flow rate will be proportional to the external milliamp or voltage signal input received by the pump. The relationship between the external analog signal and the flow rate is determined by configuring the two points A and B as shown in the graph below. The rate of flow can be proportional or inversely proportional to the analog input.

The default values stored in the pump are A (5 mA, 0%) and B (19.8 mA, 100%).

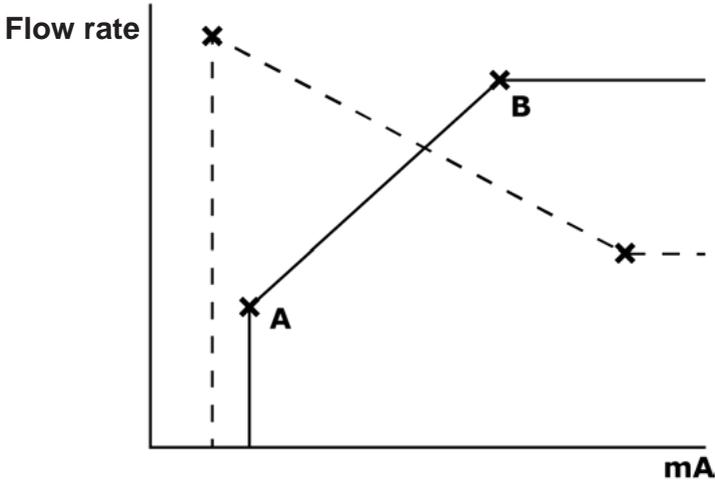

When the analog signal received is greater than the level defined by point A, the run status output will be energised as the pump is running.

To select Analog mode select **MODE**. Using the \wedge / \vee keys, scroll to **Analog** and press **SELECT**.



The analog signal being received by the pump is displayed, for information only, on the INFO screen. Press **INFO** to display this information.



19.1 Analog calibration

The pump must be stopped before attempting to calibrate the values.


High and low signals must be within range. If the signal sent is out of range you will not be able to set the signal input value and progress to the next step in the process.

Select **MENU**, then select **MODE** menu. Using the \wedge / \vee keys, scroll to **Analog** and press **CALIBRATE**.




19.2 Calibrate Input 1

Using the \wedge \vee keys, scroll to **Analog Input** and press **SELECT**.

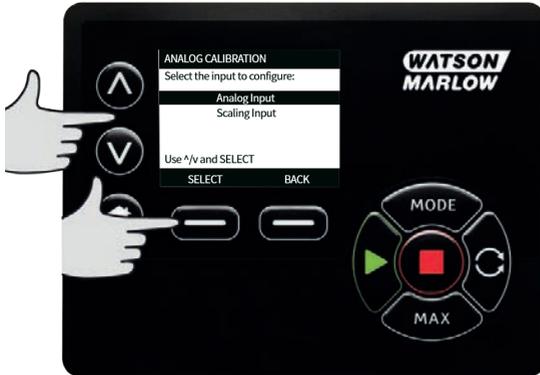

Select the input signal type using the \wedge \vee keys and press **SELECT**.

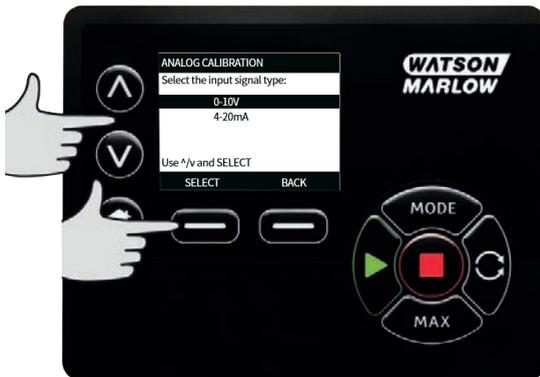

The pump gives the option to enter the high and low mA or V signals manually or via the analog input. Entering mA values is described here, however the process for entering V signals is identical.

Choose whether to enter the current values manually via the keypad, or whether to apply the current signals electrically to the analog input.



19.3 Setting a high signal

Send the high signal input to the pump, or enter the current value using the \wedge / \vee keys.



ACCEPT appears when high mA signal is within tolerance limits. Press **ACCEPT** to accept the high signal input or **CANCEL** to return to the previous screen.



19.4 Setting high flow calibration

Using the \wedge / \vee keys, scroll to the desired flow rate. Select **SET FLOW** or press **BACK** to return to the previous screen.



19.5 Setting a low signal

Send the low signal input to the pump, or enter the current value using the \wedge / \vee keys.



If the range between the low and high signal is less than 1.5 mA, the following error message will be displayed.



ACCEPT appears when low mA signal is within tolerance limits. Press **ACCEPT** to accept the low signal input or **CANCEL** to return to the previous screen.



19.6 Setting low flow calibration

Using the \wedge / \vee keys, scroll to the desired scale factor. Select **SET FLOW**.




This proceeds to the screen confirming calibration is complete. Select **ANALOG** to start in analog mode or **MANUAL** to continue in manual mode.




19.7 Calibrating the scaling input

It is possible to scale the speed of the pump remotely by one of these methods: a voltage analog signal within the range 0-10 V; or a current analog signal within the range 4-20 mA. The speed of the pump as set by Analog 1 is scaled in proportion to the signal from Analog 2 according to the formula $y=as$, where a is the speed set by Analog 1, s is the scaling set by Analog 2, and y is the scaled rotation speed.

Using the \wedge / \vee keys, scroll to **Scaling input** and press **SELECT**.

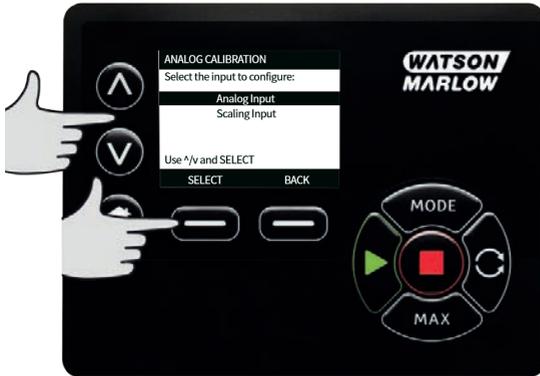

Select the input signal type, using the \wedge / \vee keys, and press **SELECT**.

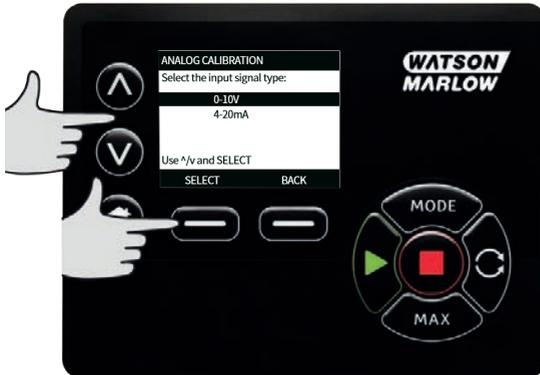

The pump gives the option to enter the high and low mA or V signals manually or via the analog input. Entering mA values is described here and the process for entering Voltage signals is identical.

Choose whether to enter the current values manually via the keypad, or whether to apply the current signals electrically to the analog input.



19.8 Setting a high signal

Send the high signal input to the pump, or enter the current value using the \wedge / \vee keys.



ACCEPT appears when high mA signal is within tolerance limits. Press **ACCEPT** to accept the high signal input or **CANCEL** to return to the previous screen.



19.9 Setting high flow calibration

Using the \wedge / \vee keys, scroll to the desired scale factor. Select **SET SCALE** or press **BACK** to return to the previous screen.



19.10 Setting a low signal

Send the low signal input to the pump, or enter the current value using the \wedge / \vee keys.



ACCEPT appears when low mA signal is within tolerance limits. Press **ACCEPT** to accept the low signal input or **CANCEL** to return to the previous screen.



19.11 Setting low flow calibration

Using the \wedge / \vee keys, scroll to the desired flow rate. Select **SET SCALE**.



This proceeds to the screen confirming calibration is complete. Select **ANALOG** to start in analog mode or **MANUAL** to continue in manual mode.



20 Network mode

Check that the pump is ready to run before selecting network operation. Remote control signals may start the pump without warning.

20.1 Network settings

- Select **MODE**
- Using the \wedge \vee keys, scroll to **Network** and press **SETTINGS**.



In both RS485 and RS232 mode there is the option to run in ENHANCED or BASIC communication protocol.



20.2 Protocol

Du models are RS232. DuN and DuS models are RS485.

20.3 Pump No (Pump Number)

Pump No will be highlighted first. Adjust the pump number using the \wedge \vee keys and press **NEXT** to assign the pump number.



Note: If the network protocol is RS485 the maximum number that can be assigned to the pump is 32, otherwise it is 16.

20.4 Baud rate

The baud rate will now be highlighted. Adjust using the \wedge / \vee keys and press **NEXT** to assign and move on.

The following table shows the available baud rates.

	RS232	RS485
Baud rates	1200	1200
	2400	2400
	4800	4800
	9600	9600
	—	19200

20.5 Stop bits

With **Stop bits** highlighted, use the \wedge / \vee keys to select the required value and **NEXT** to change an alternative setting or **FINISH** to save the network settings.

20.6 Save network settings

The following screen is displayed:



Press **SAVE** to save the new network settings or **DISCARD** to discard the new settings and return to the HOME screen.

21 MemoDose mode

Each time the pump is started by pressing **START**, it records the number of pumphead revolutions which occur until **STOP** is pressed. The number of revolutions is proportional to the volume of fluid which has been dispensed: the dose. MemoDose mode allows the user to repeat-dose a precise volume of fluid. This can be achieved by dispensing a master dose, or entering a dose volume manually using the keypad. MemoDose can repeat this dose exactly or proportionately.

21.1 To configure MemoDose


- Select **MODE**
- Using the \wedge \vee keys, scroll to **MemoDose** and press **SETTINGS**

Note: the pump must be stopped to enter MemoDose Settings.



21.2 Set flow rate

Using the \wedge \vee keys, scroll to **Flow rate** and press **SELECT**.

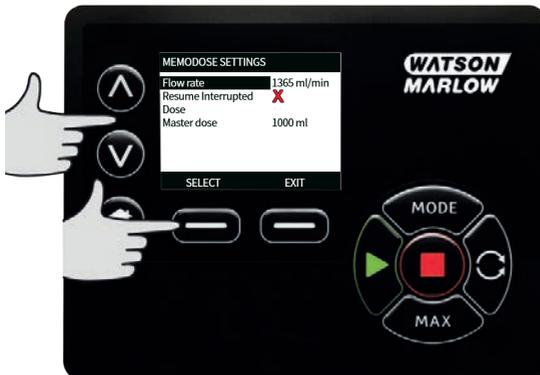

Using the \wedge \vee keys, enter the dose flow rate and press **SELECT**.



21.3 Resume interrupted doses

MemoDose Mode gives you the opportunity to resume interrupted doses following a power cycle (Note: Auto-restart must be on for this to function). Alternatively interrupted doses can be discarded and a new dose started when power is resumed.

From the MemoDose settings screen, use the \wedge \vee keys to scroll to **Resume Interrupted Dose** and press **ENABLE**. The red cross will become a green tick to indicate that Resume interrupted dose is enabled. If this function is enabled the **ENABLE** key becomes **DISABLE**. If this is pressed interrupted doses will be discarded after a power cycle.



21.4 Master dose

Using the \wedge \vee keys, scroll to **Master dose** and press **SELECT**.



The following screen is displayed; press **MANUAL** to enter a dose via the keypad or **DOSE** to dispense a master dose.



Dispensing a master dose

Press **START** to begin dispensing the Master Dose.



Press **STOP** to finish dispensing the Master Dose.



Manual dose entry

Press **MANUAL** on the master dose screen. Using the \wedge / \vee keys enter the required dose volume and press **SELECT** to record the master dose or **CANCEL** to return to MemoDose Settings.



Save dose volume

Press **SAVE** to record the Master Dose or **CANCEL** to return to MemoDose settings.



When MemoDose SETTINGS are complete the following screen is displayed; press **MEMODOSE** to start in MemoDose Mode or **BACK** to return to MemoDose settings.



21.5 Manual dosing

From the MemoDose Home screen, press **START** to deliver a dose. The screen displays the dose flow rate and the dose remaining counting down from 100% to 0%.




If the delivered dose differs from the volume required, the percentage may be adjusted within the limits 50% to 150% of the master dose. Use the \wedge / \vee keys to alter the percentage. The new dose size is displayed as a percentage on the home screen.



If **STOP** is pressed during dosing, the pump stops. Pressing **START** will resume, or discard, the interrupted dose depending on the settings in "Resume interrupted doses" on page 74.

22 Main menu

To access the main menu press the **MENU** button from one of the HOME screens or INFO screens.

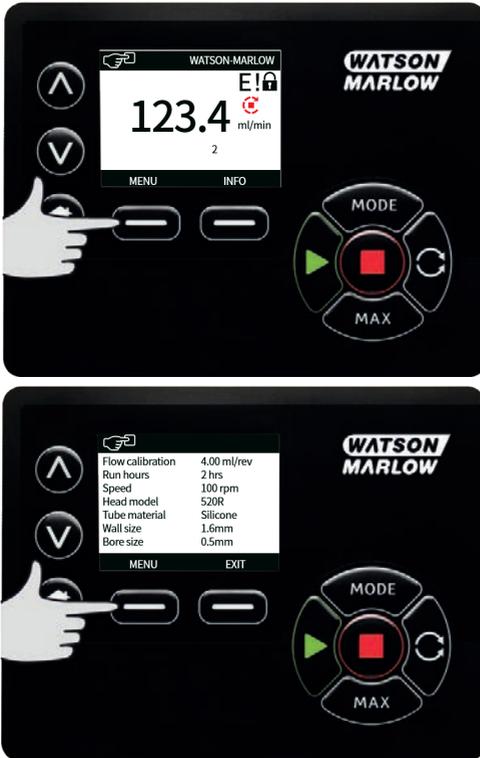

This will display the main menu as shown below. Use the \wedge / \vee keys to move the selection bar between the available options.

Press **SELECT** to choose an option.

Press **EXIT** to return to the screen from where the MENU was called.



22.1 Security settings

Security settings can be changed by selecting **SECURITY SETTINGS** from the Main menu.

Auto keypad lock

Press **ENABLE/DISABLE** to switch on/off the Auto keypad lock. When active the keypad will 'lock' after 20 seconds of inactivity.



Once locked it will display the screen below when any key is pressed. To unlock the keypad press the two **UNLOCK** keys together.



The padlock icon will appear on the operating mode home screen to show that keypad lock is activated.



Note that the STOP key will always work whether the keypad is locked or not.

PIN protection


Using the \wedge / \vee keys select **PIN protection** from the SECURITY SETTINGS menu and press **ENABLE/DISABLE** to switch on/off the PIN protection. If PIN protection has been enabled, a Master level PIN will be required to disable PIN lock.

Setting Master PIN


Setting the Master PIN protects all functionality. The Master is able to selectively enable functionality for two additional operators. These are defined as User 1 and User 2. They will be able to access this functionality by entering a PIN code assigned to them by the Master user. To set the Master PIN, scroll to Master level and press **ENABLE**.



To define a four digit Master PIN, use the \wedge / \vee keys to select each digit from 0-9. Once you have the required digit press the **NEXT DIGIT** key. After selecting the fourth digit press **ENTER**.

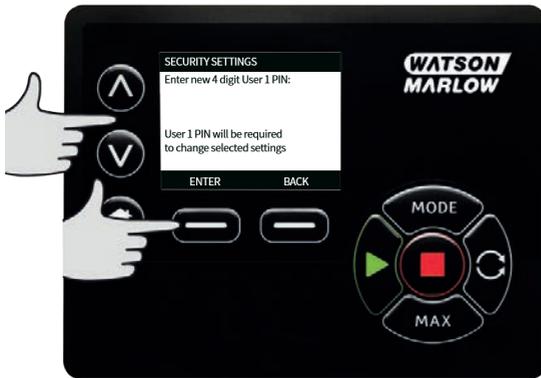

Now press **CONFIRM** to check that the number entered is the PIN you require. Press **CHANGE** to return to PIN entry.

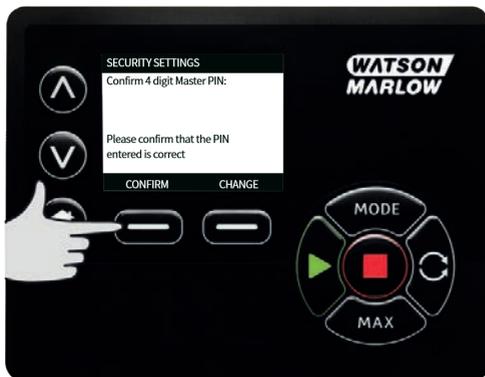


The following screen will be displayed to indicate that the Master PIN has been applied to access all functionality. Press **NEXT** to selectively enable functionality access for User 1 and User 2.




Configure User 1 security settings

The PIN PROTECTION level screen will be displayed with User 1 highlighted, press **ENABLE** to configure User 1 security settings or scroll to configure an alternative User.

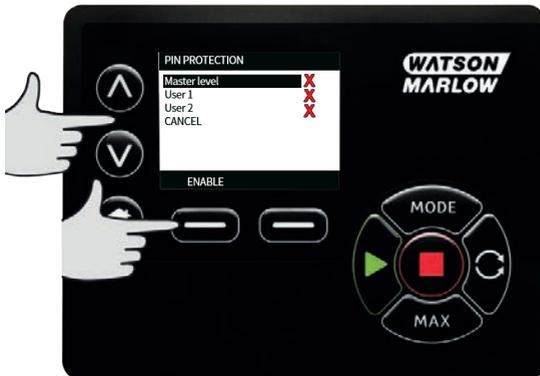

ENABLE user 1 security settings displays the PIN entry screen for User 1. To define a four digit User 1 PIN, use the \wedge / \vee keys to select each digit from 0-9. Once you have the required digit press the **NEXT DIGIT** key. After selecting the fourth digit press **ENTER**.

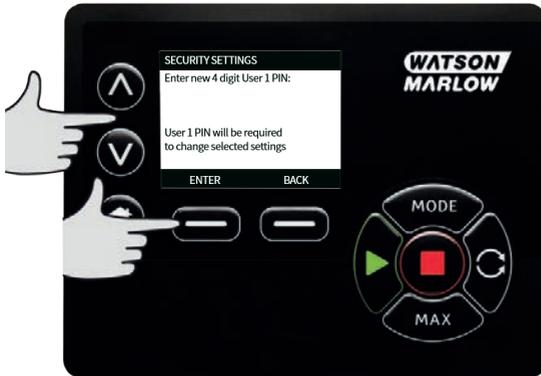

Now press **CONFIRM** to verify that the number entered is the PIN you require. Press **CHANGE** to return to PIN entry.



To define the allowed functionality, use the ^/∨ keys to select the functionality and press **ENABLE**. User 1 PIN will allow access to only the enabled functionality, to disable functionality, highlight the enabled functionality and press **DISABLE**. When all the required functionality has been enabled, press **FINISH**.



Configure User 2 security settings

The PIN PROTECTION level screen will be displayed with User 2 highlighted, press **ENABLE** to configure User 2 security settings or scroll to configure an alternative User.



ENABLE user 2 security settings displays the PIN entry screen for User 2. To define a four digit User 2 PIN, use the \wedge / \vee keys to select each digit from 0-9. Once you have the required digit press the **NEXT DIGIT** key. After selecting the fourth digit press **ENTER**.



To define the allowed functionality, use the ^/∨ keys to select the functionality and press **ENABLE**. User 2 PIN will allow access to only the enabled functionality, to disable functionality, highlight the enabled functionality and press **DISABLE**. When all the required functionality has been enabled, press **FINISH**.



Note: Once Security Settings for User 1 and User 2 have been set by the Master, only the Master PIN will allow access to Security Settings.

The HOME screen will be displayed. A PIN is now required to access all functionality. The Master PIN accesses all pump functionality and the User 1 and User 2 PINs access only the defined functionality. To enter the PIN, use the \wedge / \vee keys to select each digit from 0-9. Once you have the required digit press the **NEXT DIGIT** key. After selecting the fourth digit press **ENTER**.



If an incorrect PIN has been entered the following screen will be displayed. NOTE: this screen will also display if the PIN entered does not allow access to that functionality.



If a PIN number is entered that is already in use, the following screen will be displayed, press **CHANGE** to input an alternative PIN or **EXIT** to abort



If the PIN entered does not allow access to the functionality the following screen will be displayed.



Keypad beep

From SECURITY settings scroll to Keypad beep using the ^ / v keys and select **ENABLE**. The pump will now beep at every key press.



PIN entry on start-up

The setting **PIN entry during start-up** can be used to configure the software to choose if PIN entry is required during start up.

This feature also means that auto-restart capability is now independent of PIN code entry after start up.

If this setting is enabled ✓ then the pump will require the PIN code to be entered before the pump will enter the home control screen after a power cycle.

If this setting is disabled ✗ then the pump will not require the PIN code to be entered before the pump will enter the home control screen after a power cycle.

The auto-restart response of the pump after a power cycle is now independent of PIN entry.

The default setting, is enabled ✓ so a PIN code will be required after a power cycle before the pump will enter the home control screen.

Disabling this feature does not change any other aspects of PIN code operation. Anyone wishing to modify pump settings will still need to enter the PIN code.

22.2 General settings

To view the general settings menu, select **GENERAL SETTINGS** from the main menu.

Auto restart

This pump includes a feature called auto restart. This setting only applies to pump operation in manual mode, network mode and memodose mode.

If the pump is operating in any of these modes and this feature is enabled (configured to 'yes'), it will change the way the pump responds to a power cycle.

When Auto restart is enabled it will cause the pump to remember it's current operating settings when power is lost and to resume using these as soon as power comes back on.

This parameter only affects manual mode, network mode and memodose mode operation.

The '!' symbol is also displayed when the auto restart feature is enabled to warn users that the pump has been configured in a way that could result in unexpected operation.

Press **ENABLE/DISABLE** to turn the auto restart feature on/off (Manual mode, network mode and memodose feature only).





Do not use auto restart for more than 12 times in 24 hours. We recommend remote control where a high number of starts is required.

If the Auto restart feature is enabled it may cause the pump to start as soon as power is turned on.



Auto-restart only affects operation of manual mode, network mode and memodose mode.

If Auto restart is enabled the "!" Symbol is shown on the screen to warn users that the pump may operate without any manual intervention (pump resumes with previous settings).

Do not use auto restart for more than 12 times in 24 hours. We recommend remote control where a high number of starts is required.



If the pump is configured to network mode or analog mode it will respond to remote commands at any time including immediately after power on. The "!" Symbol is shown on the screen to warn users that the pump may operate without any manual intervention (e.g. a remote setpoint could start the pump with no key press required).

The ! symbol is a warning that the pump could remotely activate at any time. It will always be displayed when the pump is in any remote control mode (analog and network mode). It will also be displayed when auto restart has been enabled as the pump could activate after a power cycle, (auto-restart applies to manual mode, network mode and memodose).



Flow units

The current chosen flow unit is displayed on the right hand side of the screen. To change flow units move the selection bar over the flow unit menu entry and press **SELECT**.

Use the \wedge / \vee keys to move the selection bar over the required flow unit, then press **SELECT**. All flow rates displayed on screens will now be in the chosen units.



If a mass flow unit is selected, the specific gravity of the fluid must be entered. The following screen is displayed.



Use the \wedge / \vee keys to enter the value of the specific gravity, and press **SELECT**.


Pump label

The pump label is a user defined 20 digit alphanumeric label which is displayed in the header bar of the home screen. To define or edit the pump label, move the selection bar over the Pump label menu entry and press **SELECT**. If a pump label has been previously defined, this will be displayed on screen to allow editing, otherwise it will display the default label "WATSON-MARLOW".



Use the **^** / **v** keys to scroll through the available characters for each digit. The available characters are 0-9, A-Z and SPACE.

Press **NEXT** to move onto the next character, or **PREVIOUS** to move back to the previous character.

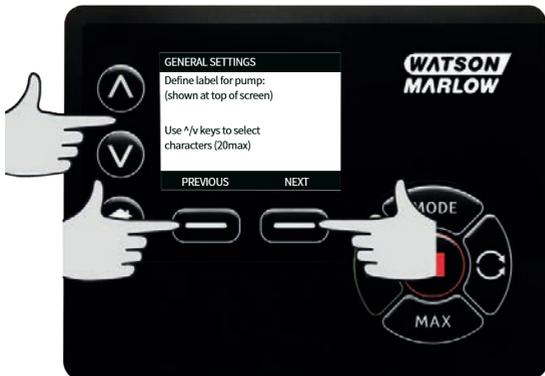

Press **FINISH** to save the entry and return to the general settings menu.



Pumphead type

Select **GENERAL SETTINGS** from the main menu.

Use the \wedge \vee keys to move the selection bar over **Pumphead type** and press **SELECT**. The following screen will be displayed.



Use the \wedge / \vee keys to move the selection bar over **Pumphead** and press **SELECT**.



Use the \wedge / \vee keys to move the selection bar over the required pumphead type and press **SELECT**.




Tube size and tube material

Select **Tube size** from GENERAL SETTINGS, then use the \wedge / \vee keys to move the selection bar over **Bore size** and press **SELECT**.



Use the \wedge / \vee keys to move the selection bar over the tube size to be used and press **SELECT**.

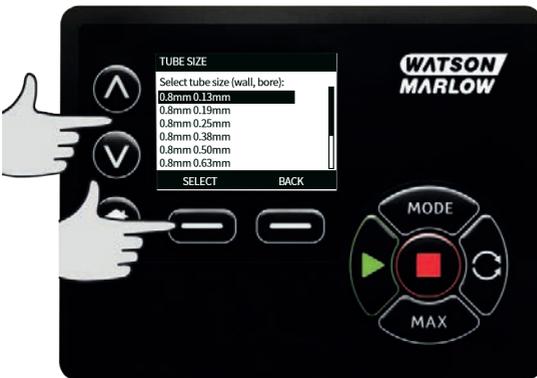


If a LoadSure element has been selected then the tube size is displayed as pressure and bore.



This screen also allows you to select the tube material used.

Use the \wedge / \vee keys to move the selection bar over **Tube material** and press **SELECT**.

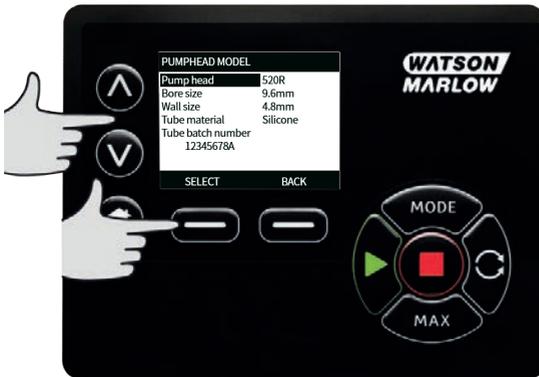

Use the \wedge / \vee keys to move the selection bar over the tube material to be used and press **SELECT**.



The PUMPHEAD MODEL screen allows the tube Lot Number to be recorded for future reference. Use the \wedge / \vee keys to move the selection bar over **Tube lot number** and press **SELECT**.

Use the \wedge / \vee keys to scroll through the available characters for each digit. The available characters are 0-9, A-Z, and SPACE.

Press **NEXT** to move onto the next character, or **PREVIOUS** to move back to the last character.




Press **FINISH** to save the entry and return to the general settings menu.

Restore defaults

To restore the factory default settings select **Restore defaults** from the general settings menu.

There are two confirmation screens to ensure that this function is not carried out in error.

Press **CONFIRM** followed by **RE-CONFIRM** to restore the defaults.

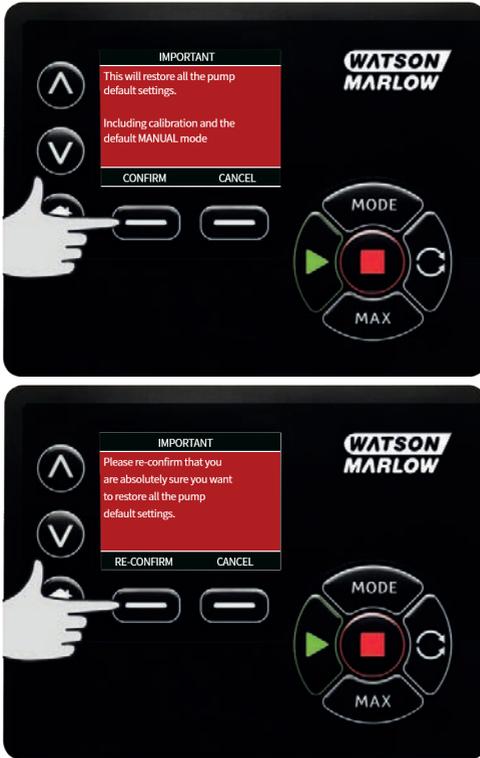

Language

Select language from the general settings menu to choose an alternative display language for the pump. The pump must be stopped before changing the language.

Use the \wedge/\vee keys to move the selection bar to your required language. Press **SELECT** to confirm.



Your selected language will now be displayed on screen. Press **CONFIRM** to continue, all displayed text will now appear in your chosen language.

Press **REJECT** to return to the language choice screen.



MODE menu

Selecting **MODE** menu from the main menu will navigate you to access the sub-menu shown below. This is the same as pressing the **MODE** key. Please see "Mode menu" on page 1 for further details.

22.3 Control settings

Select **CONTROL SETTINGS** from the main menu to access the sub menu shown below. Use the \wedge / \vee keys to move the selection bar. Press **SELECT** to choose the required function.



Speed limit



The maximum speed the pump is capable of running at is 265 rpm.

Select **Speed limit** from the control settings menu to define a lower maximum speed limit for the pump.

This speed limit will be applied to all operating modes.

Use the \wedge / \vee keys to adjust the value and press **SAVE** to set.



Applying a speed limit automatically re-scales the analog speed control response.

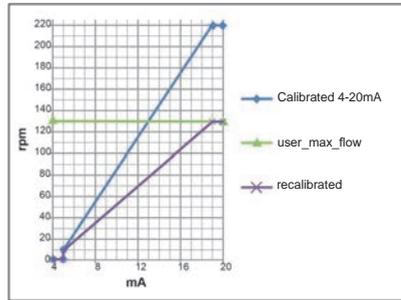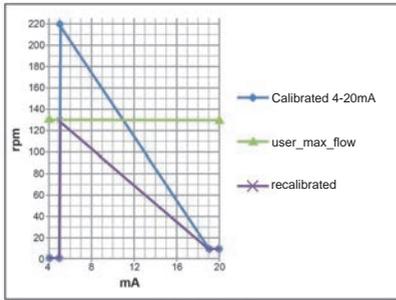

0-4 bar pumping pressure



This pump's default running speed is 165rpm. It can be run at any speed up to 265rpm. Please note, however:

- The 620RE and 620RE4 rotor warranty is limited to 2 bar from 165rpm to 265rpm.
- A warning is displayed when the user sets the speed above 165rpm.

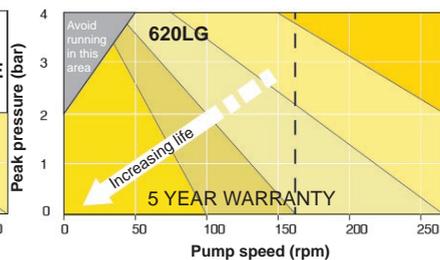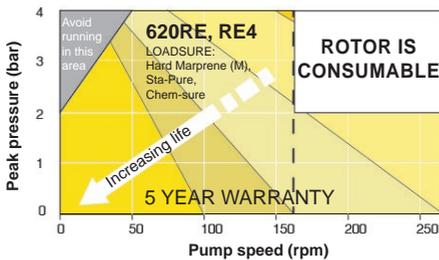

Note: Applies to 620RE MarkII and 620RE4 MarkII pumpheads only. (The 620LG is not limited.)

0-2 bar pumping pressure

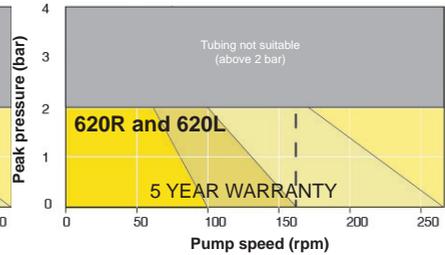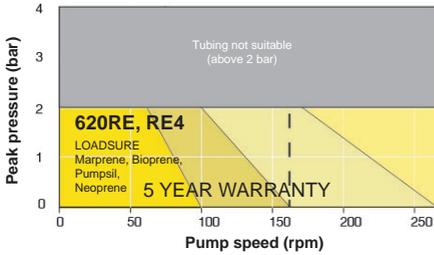

Reset run hours

Select **Reset run hours** from the control settings menu.


Select **RESET** to zero the run hours counter. The run hours counter can be viewed by pressing **INFO** from your home screen. The following screen will be displayed. Press **RESET** to reset the run hours or **CANCEL** to return to the CONTROL SETTINGS menu.



22.4 Configure outputs

Select **Configure outputs** from the CONTROL SETTINGS menu.

Use the \wedge / \vee keys and press **SELECT** to choose which output to configure.

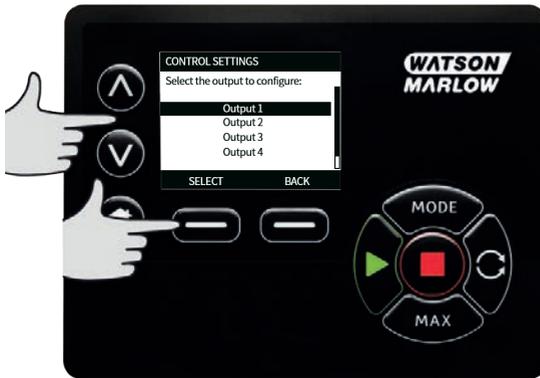

Use the \wedge / \vee keys and press **SELECT** to choose which pump status you require for the chosen output. The tick symbol indicates the current setting.



Use the \wedge / \vee keys and press **SELECT** to choose the logic state of the chosen output.
Press **SELECT** to program the output or **BACK** to cancel.



22.5 Configure inputs

Select **Configure inputs** from the CONTROL SETTINGS menu.
Use the \wedge / \vee keys and press **SELECT** to choose which input to configure.



Use the \wedge / \vee keys and press **SELECT** to choose the logic state of the chosen input.


Press **SELECT** to program the output or **BACK** to cancel.



NOTE: On this model, Inputs 4 and 5 are configured for a pressure sensor.

Disable remote stop in manual mode

Users can disable/enable the remote stop input when the pump is in manual mode by using the following sequence to configure the 'start/stop' settings.

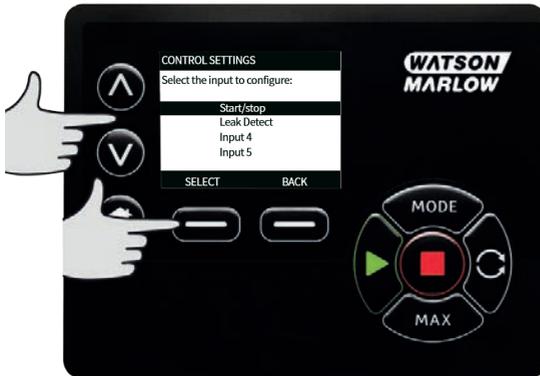

The default is ✖. The start/stop input is not disabled in manual mode. Press **SELECT** to change the setting to ✔.



Press **HOME** to return and store the setting. The input is now disabled in manual mode.



Enable remote stop in manual mode

The setting is ✓. The start/stop input is disabled. Press **SELECT** to open the logic state menu.



Use the ^ /v keys and press **SELECT** to choose the logic state of the chosen input for your connected control hardware.



Press **HOME** to return and store the setting. The input is now enabled in manual mode.



22.6 Help

Help

Select Help from the main menu to access the help screens.



SOFTWARE VERSIONS	BOOTLOADER VERSIONS
Main Processor Code: 1.2	Main Processor Code: 1.2
HMI Processor Code: 1.2	HMI Processor Code: 1.2
HMI Screen Resources: 1.2	
BRUNNEN JS Reorder Code: 1.2	
BOOTLOADER BACK	BOOTLOADER BACK

23 Troubleshooting

If the pump display remains blank when the pump is switched on, make the following checks:

- Check that the mains power is available to the pump.
- Check the fuse in the wall plug if one is present.
- Check the position of the voltage selector switch.
- Check the mains power switch at the rear of the pump.
- Check the fuse in the fuse holder in the centre of the switch plate at the rear of the pump.

If the pump runs but there is little or no flow, make the following checks:

- Check that fluid is supplied to the pump.
- Check for any kinks or blockages in the lines.
- Check that any valves in the line are open.
- Check that the tube and rotor are in the pumphead.
- Check that the tube is not split or burst.
- Check that the correct wall-thickness tube is being used.
- Check the direction of rotation.
- Check that the rotor is not slipping on the drive shaft.

If the pump turns on, but will not run:

- Check the remote stop function and configuration.
- Check the mode you are in, are you in analog mode.
- Try to operate and run the pump in manual mode.

23.1 Leak detection

If a Watson-Marlow leak detector has been fitted to the pumphead, and a leak is detected; the pump will display the following message:



Follow the instructions in "Tube replacement " on page 119 to replace your tube or tubing element.

If this message is repeated when power is returned to the pump check that the leak detector is clean and free of debris and cycle the power to the pump.

Note: The message will continue to be displayed unless the leak is cleared and the acknowledge key is pressed.

23.2 Error codes

If an internal error occurs, an error screen with a red background is displayed. Note: Signal out of range, over signal and leak detected error screens report the nature of an external condition. They do not flash.

Error code	Error condition	Suggested action
Er 0	FRAM write error	Attempt to reset by switching power OFF/ON. Or seek support.
Er 1	FRAM corruption	Attempt to reset by switching power OFF/ON. Or seek support.
Er 2	FLASH write error during drive update	Attempt to reset by switching power OFF/ON. Or seek support.
Er 3	FLASH corruption	Attempt to reset by switching power OFF/ON. Or seek support.
Er 4	FRAM shadow error	Attempt to reset by switching power OFF/ON. Or seek support.
Er 9	Motor stalled	Stop pump immediately. Check pumphead and tube. Power OFF/ON may reset. Or seek support.

Error code	Error condition	Suggested action
Er10	Tacho fault	Stop pump immediately. Power OFF/ON may reset. Or seek support.
Er14	Speed error	Stop pump immediately. Power OFF/ON may reset. Or seek support.
Er15	Over current	Stop pump immediately. Power OFF/ON may reset. Or seek support.
Er16	Over voltage	Stop pump immediately. Check supply. Power OFF/ON may reset.
Er17	Under voltage	Stop pump immediately. Check supply. Power OFF/ON may reset.
Er20	Signal out of range	Check analog control signal range. Trim signal as required. Or seek support.
Er21	Over signal	Reduce the analog control signal.
Err50	Communication error (internal pump communications error and not a network error)	Attempt to reset by switching power OFF/ON. Or seek support.

23.3 Technical support

Watson-Marlow Fluid Technology Group
Falmouth, Cornwall
TR11 4RU
UK

Contact your local Watson-Marlow representative for support.
www.wmftg.com/contact

24 Drive maintenance

There are no user serviceable parts inside the pump. Please contact your local Watson-Marlow representative to arrange repair.

25 Drive spares

Description	Part No.
Replaceable main fuse, type T5A, H 250 V (Pack of 5)	
Foot (Pack of 5)	MNA2101A
Glands (Std)	GR0056
Glands (EMC)	GR0075

26 Pumphead replacement



Always isolate the pump from the mains power supply before opening any guard or track, or performing any positioning, removal or maintenance operation.

26.1 Pumphead replacement


520R

620RE, 620RE4 and 620R safeguarding



Primary safety on 630 series pumps is provided by the tool-lockable pumphead guard. Secondary (backup) protection is provided in the form of an electrical guard switch which stops the pump if the pumphead guard is opened. The electrical guard switch on cased pumps should never be used as primary protection. Always disconnect the mains power supply to the pump before opening the pumphead guard.


Removal

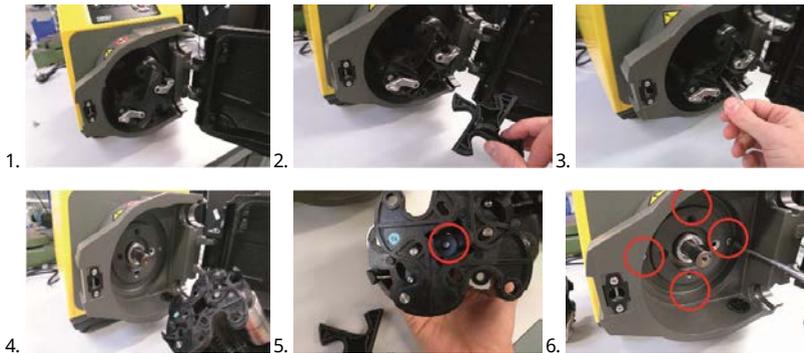

Refitting

Check adaptor ring

Ensure correct adaptor ring fitted

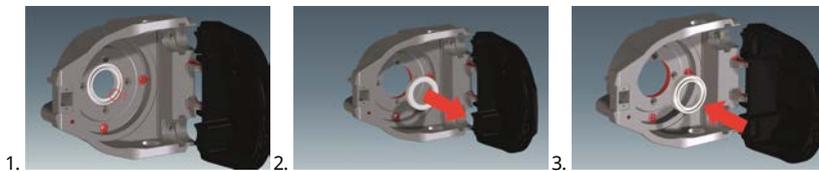

Rotor refitting



Ensure that the rotor hub spacer is still installed.

620R, 620RE and 620RE4 waste port



27 Tube replacement




Always isolate the pump from the mains power supply before opening any guard or track, or performing any positioning, removal or maintenance operation.

27.1 Continuous tubing

620R



620L

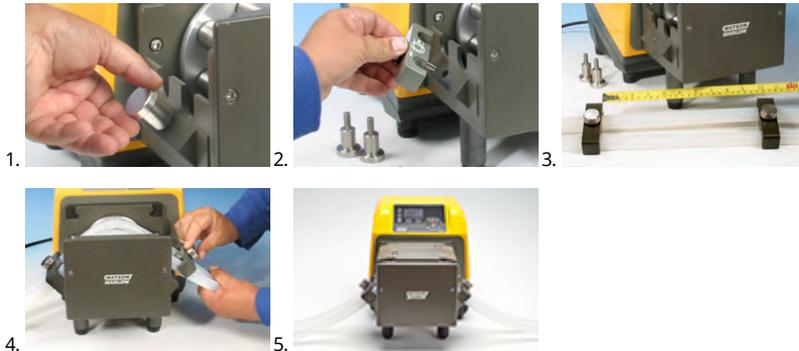

≤8.0 mm=230 mm ,
12 mm/16 mm=240 mm

27.2 Tube elements

630Du/RE and 630Du/RE4



630 Sanitary connectors



630 Industrial connectors



630Du/L



General guide to cleaning with solvents

Chemical	Cleaning precautions
Aliphatic hydrocarbons	Remove guard. Minimize rotor cap and clutch boot exposure to less than one minute (risk of attack).
Aromatic hydrocarbons	Remove guard. Minimize rotor cap and clutch boot exposure to less than one minute (risk of attack).
Ketone solvents	Remove guard. Minimize rotor cap and clutch boot exposure to less than one minute (risk of attack).
Halogenated/chlorinated solvents	Not recommended: possible risk to polycarbonate tube clamp adjusters and polypropylene tube clamp locators.
Alcohols, general	No precaution necessary.
Glycols	Minimize rotor cap and clutch boot exposure to less than one minute (risk of attack).
Estersolvents	Remove guard. Minimize rotor cap and tube clamp location cap exposure to less than one minute (risk of attack).
Ether solvents	Not recommended: possible risk to polycarbonate tube clamp adjusters and polypropylene tube clamp locators.

28.2 Tubing and element part numbers

Continuous tubing for 620R pumpheads

					
mm	inch	#	Marprene	Bioprene	Pumpsil silicone
6.4	1/4	26	0064.032	933.0064.032	913.A064.032
9.6	3/8	73	0096.032	933.0096.032	913.A096.032
12.7	1/2	82	0127.032	933.0127.032	913.A127.032
15.9	5/8	184	0159.032	933.0159.032	913.A159.032
mm	inch	#	STA-PURE Series PCS	Neoprene	
6.4	1/4	26	961.0064.032	920.0064.032	
9.6	3/8	73	961.0096.032	920.0096.032	
12.7	1/2	82	961.0127.032	920.0127.032	
15.9	5/8	184	961.0159.032	920.0159.032	
mm	inch	#	PureWeld XL	STA-PURE Series PFL	
6.4	1/4	26		966.0064.032	
9.6	3/8	73	941.0096.032	966.0096.032	
12.7	1/2	82	941.0127.032	966.0127.032	
15.9	5/8	184		966.0159.032	

LoadSure tube elements (620RE and 620RE4)

	12 mm Tri-clamp 3/4in	17 mm Tri-clamp 3/4in	12 mm Cam and Groove 3/4in	17 mm Cam and Groove 3/4in
STA-PURE Series PCS	961.0120.PFT	961.0170.PFT		
STA-PURE Series PFL	966.T120.SST	966.T170.SST		
Bioprene TM	933.P120.PFT	933.P170.PFT		
Bioprene TL	933.0120.PFT	933.0170.PFT		
Pumpsil silicone	913.A120.PFT	913.A170.PFT		
Marprene TM			902.P120.PPC	902.P170.PPC
Marprene TL			902.0120.PPC	902.0170.PPC
Neoprene			920.0120.PPC	920.0170.PPC

Note: = for 4 bar use

620L tubing codes

Marprene		Dispensing information	
		Bore (mm)	Litres/rev
902.E080.K40	Y element	8.0	0.01689
902.E120.K40		12.0	0.03029
902.E160.040		16.0	0.04251
902.0080.040	Continuous	8.0	0.01689
902.0120.040		12.0	0.03029
902.0160.040		16.0	0.04251

Bioprene		Dispensing information	
		Bore (mm)	Litres/rev
933.E080.K40	Yelement	8.0	0.01689
933.E120.K40		12.0	0.03029
933.E160.040		16.0	0.04251
933.0080.040	Continuous	8.0	0.01689
933.0120.040		12.0	0.03029
933.0160.040		16.0	0.04251

Pumpsil silicone		Dispensing information	
		Bore (mm)	Litres/rev
913.AE80.K40	Yelement	8.0	0.01672
913.A12E.K40		12.0	0.03214
913.A16E.K40		16.0	0.04353
913.A080.040	Continuous	8.0	0.01672
913.A120.040		12.0	0.03214
913.A160.040		16.0	0.04353

Neoprene		Dispensing information	
		Bore (mm)	Litres/rev
920.E080.K40	Yelement	8.0	0.01721
920.E120.K40		12.0	0.02901
920.E160.K40		16.0	0.05004
920.0080.040	Continuous	8.0	0.01721
920.0120.040		12.0	0.02901
920.0160.040		16.0	0.05004

620LG element codes

STA-PURE Series PCS		Dispensing information	
		Bore (mm)	Litres/rev
961.E080.K40	Y element	8.0	0.01979
961.E120.K40		12.0	0.03349
961.E160.K40		16.0	0.04689

STA-PURE Series PFL		Dispensing information	
		Bore (mm)	Litres/rev
966.E080.K40	Y element	8.0	0.01979
966.E120.K40		12.0	0.03349
966.E160.K40		16.0	0.04689

28.3 CIP and SIP procedures

General instructions

- Unlock the guard and disengage the rollers.
- Close the guard and squeeze against the track until the latch clicks.
- Observe a 1 m safety area.

CIP

- LoadSure tube elements and continuous tubing can be cleaned using CIP process.
- Ensure that the tubing material is chemically compatible with the cleaning agent that is to be used.
- If cleaning agents are spilled over the pumphead, wash down immediately.
- Ensure that controlled waste pipe work is fitted to allow safe release of cleaning agent in the event of a tube failure.

SIP

- Only STA-PURE Series PCS tube elements can be used in steam-in-place sterilisation processes.
- STA-PURE Series PCS tubing elements can be sterilised to 3A Class 2 and FDA minimum recommended standard which is 121 °C (250 °F) at 1 bar (14.5 psi) saturated steam for 20 minutes.
- Monitor the process continuously.
- If a tube failure occurs, shut down the process. Do not touch the pumphead until a 20 minute cooling down period has been observed.
- Ensure a 20 minute acclimatisation period is observed before running the pump following SIP.
- Ensure that controlled waste pipework is fitted to allow a safe release of steam in the event of a tube failure.
- Ensure a 1 m safety zone is maintained around the pumphead during SIP cycles.



Ensure that the pumphead door is closed and locked before SIP cleaning commences.

28.4 Pumphead spares


620RE, RE4 and 620R pumphead spares



Number	Spare	Description
	063.4211.000	620R Mark II pumphead
	063.4231.000	620RE Mark II pumphead
	063.4431.000	620RE4 Mark II pumphead
1	069.4101.000	620RTC: continuous tubing clamp set
2	MRA0249A	Roller assembly (element pumphead)
2	MRA0250A	Roller assembly (continuous pumphead)
3	MR2053B	Clip: Oddie retainer
3	MR2054T	Oddie washer
3	SG0021	Oddie spring
3	CX0150	Oddie circlip (snap ring)
4	MRA3020A	Track assembly
5	MR2027T	Controlled waste threaded fitting 620R, RE, RE4

Number	Spare	Description
6	MR2028M	Controlled waste port blanking plug
7	MR2055M	Rotor cover
8	MRA0296A	620R, RE, RE4 Complete Guard kit (Including hinge pins)
9	MRA0320A	Rotor assembly 2-roller element
9	MRA0321A	Rotor assembly 4-roller element
9	MRA0322A	Rotor assembly 2-roller continuous
10	XX0220	Key - metal
11	MR2096T	Controlled waste threaded fitting locking nut
12	MR2029T	Cased drive MG605 shaft/rotor hub spacer
13	FN0488	Cased drive track locating screws M6 x 10
13	FN0523	Close-coupled track locating screws
14	FN0581	Rotor locating washer M6
15	MR2251B	Rotor locating bolt M6 x 25
16	TT0006	5 mm Allen key
17	MA0017	Magnet

620L and 620LG pumphead spares

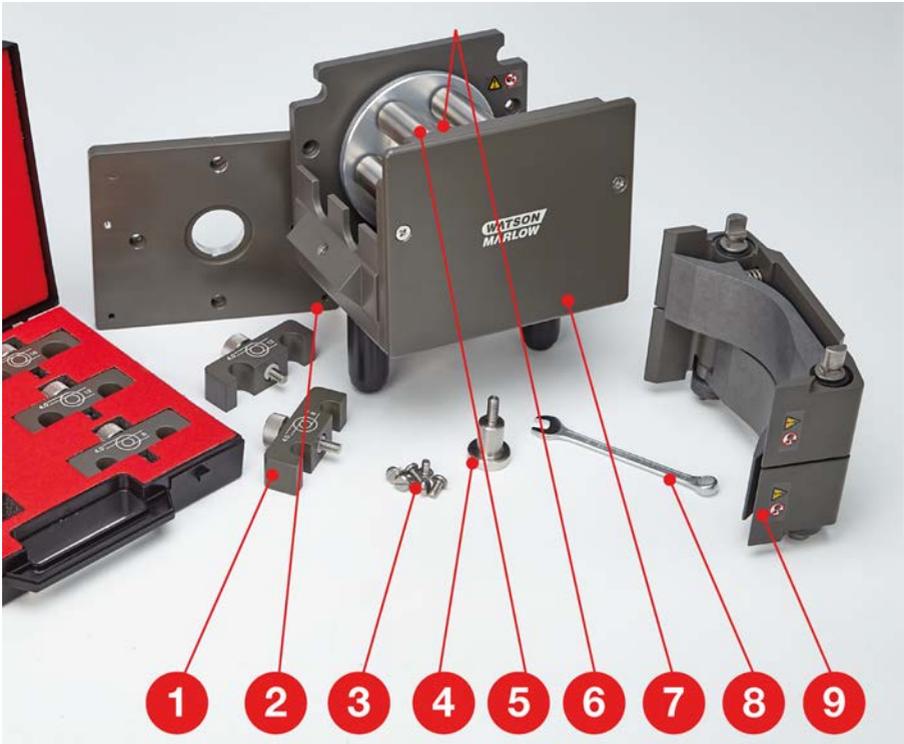

Number	Spare	Description
	063.4603.000	620L pumphead
	063.4623.000	620LG pumphead
1	069.4001.000	Tube clamp set
2	MR3017S	Adaptor plate
3	FN0493	M6x12 screws x 6
4	MR0890T	Tube locating peg
5	MRA0150A	Rotor assembly
6	BB0018	Shaft bearing
7	MR0850S	Front plate

Number	Spare	Description
8	TT0005	10 mm / 3/8in spanner
9	MRA3026A	Track assembly

29 Performance data

29.1 620RE, 620RE4 and 620R performance data

Pumping conditions

All performance figures in this operating instruction have been recorded against peak pipeline pressures.

This pump is rated to 4 bar (58 psi) peak pressure when fitted with a 620RE, 620RE4 or 620LG pumphead using high-pressure tubing. However, it will generate in excess of 4 bar (58 psi) peak pressure if the pipeline is restricted. Where it is important that 4 bar (58 psi) is not exceeded, pressure relief valves should be installed in the pipeline.

Viscosity handling is maximised by using 4.0 mm wall LoadSure elements with the 620RE and 620RE4 pumpheads.

Flow rates are normalised test values obtained using new tubing with the pumphead rotating clockwise pumping water at 20 °C with negligible inlet and discharge pressures. Actual flow rates achieved may vary because of changes in temperature, viscosity, inlet and discharge pressures, system configuration and tubing performance against time. Flow rates may also vary due to normal manufacturing tolerances of the tubing. These tolerances will make flow rate variance more pronounced at smaller bore sizes.

For precise and repeatable performance it is important to determine flow rates under operating conditions for each new piece of tubing. 620R and 620L family pumpheads' flow rates are directly proportional to rotor speed. If you wish to run the pump at a speed not shown in the tables below, flow figures can be reached by dividing the maximum flow shown in the tables below by the maximum rpm figure, and multiplying the result by your required speed in rpm.

In normal circumstances, rotor and tube life are maximised if the pumphead is run slowly, particularly when pumping at high pressure. However, to maintain performance at pressures above 2 bar, avoid running the pumphead below 50 rpm. If low-flow, high-pressure operation is necessary, switching to a smaller tube is recommended.

STA-PURE Series PCS, STA-PURE Series PFL and Marprene TM tubing are hard to compress when new. When using tubing made of these materials, the first five pumphead revolutions should be at a speed of 10 rpm or greater. If the pump is run slower, the safety system built into pump drive's software may cause it to stop and display an over-current error message.

Note: Flow rates quoted have been rounded for simplicity, but are accurate to within 5% - well within the normal tubing tolerance variation of flow rate. They should therefore be taken as a guide. Real flow rates in any application must be determined empirically.

620RE, 620RE4 and 620R flow rates - Metric (SI)

630 STA-PURE Series PCS, STA-PURE Series PFL, Neoprene, l/min

	620R				620RE		620RE4	
Speed rpm	6.4 mm	9.6 mm	12.7 mm	15.9 mm	12.0 mm	17.0 mm	12.0 mm	17.0 mm
0.1	0.001	0.003	0.004	0.01	0.004	0.01	0.003	0.01
265	3.2	6.6	11	16	11	18	9.0	13

630 Marprene TL, Bioprene TL, l/min

	620R (standard)				620RE (standard)		620RE4 (standard)	
Speed rpm	6.4 mm	9.6 mm	12.7 mm	15.9 mm	12.0 mm	17.0 mm	12.0 mm	17.0 mm
0.1	0.001	0.003	0.004	0.01	0.004	0.01	0.003	0.005
265	3.4	6.6	11	12	9.8	18	8.3	12

630 Marprene TM, Bioprene TM, l/min

	620RE (hard)				620RE4 (hard)			
Speed rpm	12.0 mm		17.0 mm		12.0 mm		17.0 mm	
0.1	0.004		0.01		0.003		0.004	
265	9.8		16		8.3		11	

630 Pumpsil silicone, l/min

	620R				620RE		620RE4	
Speed rpm	6.4 mm	9.6 mm	12.7 mm	15.9 mm	12.0 mm	17.0 mm	12.0 mm	17.0 mm
0.1	0.001	0.003	0.004	0.01	0.004	0.01	0.003	0.004
265	3.2	7.2	11	15	10	16	8.7	11

620RE, 620RE4 and 620R flow rates - US (Imperial)

630 STA-PURE Series PCS, STA-PURE Series PFL, Neoprene, USGPM								
	620R				620RE		620RE4	
Speed rpm	6.4 mm	9.6 mm	12.7 mm	15.9 mm	12.0 mm	17.0 mm	12.0 mm	17.0 mm
0.1	0.0003	0.001	0.001	0.002	0.001	0.002	0.001	0.001
265	0.8	1.8	2.8	4.3	2.8	5.1	2.4	3.5

630 Marprene TL, Bioprene TL, USGPM								
	620R (standard)				620RE (standard)		620RE4 (standard)	
Speed rpm	6.4 mm	9.6 mm	12.7 mm	15.9 mm	12.0 mm	17.0 mm	12.0 mm	17.0 mm
0.1	0.0003	0.001	0.001	0.002	0.001	0.002	0.001	0.001
265	0.9	1.8	2.8	3.0	2.6	4.7	2.2	3.3

630 Marprene TM, Bioprene TM, USGPM						
	620RE (hard)			620RE4 (hard)		
Speed rpm	12.0 mm		17.0 mm	12.0 mm		17.0 mm
0.1	0.001		0.002	0.001		0.001
265	2.6		4.1	2.2		2.9

630 Pumpsil silicone, USGPM								
	620R				620RE		620RE4	
Speed rpm	6.4 mm	9.6 mm	12.7 mm	15.9 mm	12.0 mm	17.0 mm	12.0 mm	17.0 mm
0.1	0.0003	0.001	0.001	0.001	0.001	0.002	0.001	0.001
265	0.8	1.9	2.9	3.9	2.7	4.3	2.3	3.0

620L and 620LG flow rates

Note: Rates apply to Y elements and two channels of continuous tubing combined.

620L flow rates (2 bar pressure capacity)

620L, Neoprene, l/min				620L, Neoprene, USGPM			
Speed rpm	Tube bore (4.0 mm wall)			Speed rpm	Tube bore (4.0 mm wall)		
	8.0 mm	12.0 mm	16.0 mm		8.0 mm	12.0 mm	16.0 mm
0.1	0.002	0.003	0.005	0.1	0.0005	0.0008	0.0013
265	4.6	7.7	13.3	265	1.20	2.03	3.50

620L, Marprene, Bioprene, l/min				620L, Marprene, Bioprene, USGPM			
Speed rpm	Tube bore (4.0 mm wall)			Speed rpm	Tube bore (4.0 mm wall)		
	8.0 mm	12.0 mm	16.0 mm		8.0 mm	12.0 mm	16.0 mm
0.1	0.002	0.003	0.004	0.1	0.0004	0.0008	0.0011
265	4.5	8.0	11.3	265	1.18	2.12	2.98

620L, Pumpsil silicone, l/min				620L, Pumpsil silicone, USGPM			
Speed rpm	Tube bore (4.0 mm wall)			Speed rpm	Tube bore (4.0 mm wall)		
	8.0 mm	12.0 mm	16.0 mm		8.0 mm	12.0 mm	16.0 mm
0.1	0.002	0.003	0.004	0.1	0.0004	0.0008	0.0011
265	4.4	8.5	11.5	265	1.17	2.25	3.05

620LG flow rates (4 bar pressure capacity)

620L, STA-PURE Series PCS, STA-PURE Series PFL, l/min				620L, STA-PURE Series PCS, STA-PURE Series PFL, USGPM			
Speed rpm	Tube bore (4.0 mm wall)			Speed rpm	Tube bore (4.0 mm wall)		
	8.0 mm	12.0 mm	16.0 mm		8.0 mm	12.0 mm	16.0 mm
0.1	0.002	0.003	0.005	0.1	0.0005	0.0009	0.0012
165	3.1	5.7	7.8	165	0.81	1.52	2.05
265	5.2	9.0	12.4	265	1.39	2.38	3.28

30 Trademarks

Watson-Marlow, LoadSure, Qdos, ReNu, LaserTraceability, Pumpsil, PureWeld XL, Bioprene, Marprene are registered trademarks of Watson-Marlow Limited. Tri-Clamp is a registered trademark of Alfa Laval Corporate AB.

STA-PURE Series PCS and STA-PURE Series PFL are trademarks of W.L.Gore and Associates.

EtherNet/IP™ is a trademark of ODVA, Inc.

Studio 5000® is a trademark of Rockwell Automation.

31 Disclaimers

The information contained in this document is believed to be correct but Watson-Marlow Fluid Technology Group accepts no liability for any errors it contains and reserves the right to alter specifications without notice.

WARNING: This product is not designed for use in and should not be used for, patient-connected applications.

32 Publication history

File	Date of issue	Notes
m-630dun-en-01 630 Du/DuN pump	08.16	First release
m-630dun-en-04 630 Du/DuN pump	09.18	All versions updated, combined to single source and unified to Issue 4
m-630dun-en-08 630 Du/DuN pump	04.2020	All versions updated and unified to Issue 8
m-630dun-en-08.1 630 Du/DuN pump	12.20	Removed PROFIBUS information that was included in error
m-630dun-en-08.2 630Du/DuN pump	01.21	Issue 8.2 - "Section 23 Help" corrected to "Section 22.6 Help"