

# 530 Drive with 520RET Pumphead

500 series cased pump

## Features and benefits


- Colour display and intuitive menu structures provide visual status indication and minimal key presses
- Flow rates from 0.24 ml/min (0 USGPH) to 2900 ml/min (46 USGPH)
- 520R, 520R2, 520REL, 520REM, 520REH, 520RET and 505L pumpheads available as standard, others available on request
- 2,200:1 speed control range from 0.1 to 220 rpm in 0.1 rpm increments
- Keypad incorporates 3-level security PIN lock
- IP31 (NEMA 2) and IP66 (NEMA 4X) cased pumps
- Dual voltage, 115 V/230 V 50/60 Hz
- Remote Analogue/Digital, RS232, RS485, PROFIBUS®, PROFINET®, SCADA and EtherNet/IP™ control options



## 530 Drive with 520RET Pumphead performance

520RET twin-roller pumpheads for Maxthane® LoadSure® elements tubing – flow rates – ml/min (USGPH)				
Tube material	Speed	3.2 mm	6.4 mm	9.6 mm
Maxthane®	0.1-220 rpm	0.24-520 (0-8.24)	0.75-1600 (0.01-25.4)	1.3-2900 (0.02-46.0)

Maxthane® LoadSure® Elements, Counter clockwise Rotation 200 rpm RET rotor

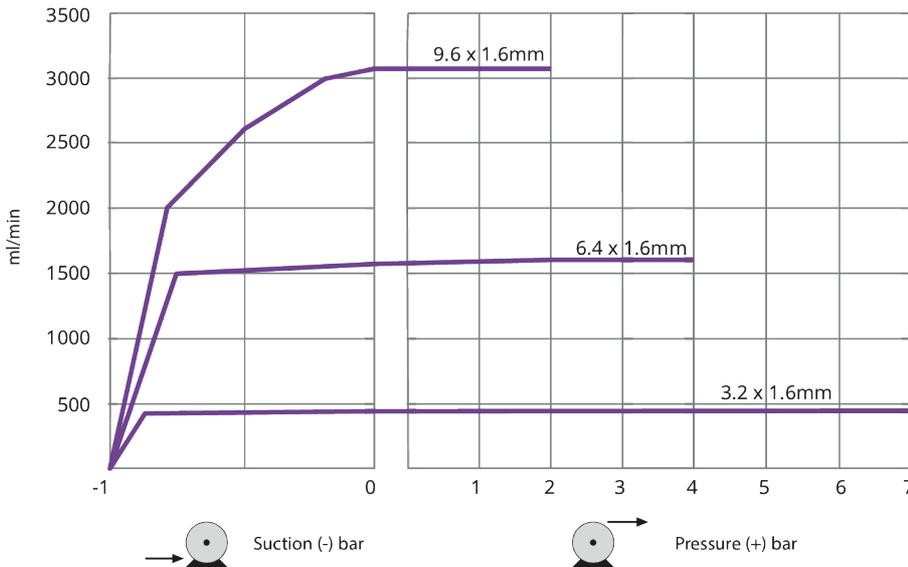

To achieve the discharge pressures stated above, the rotor must be run counter clockwise. To achieve optimal tube life, run the rotor clockwise at a maximum discharge pressure of 2 bar.

## Technical specifications

	530 Drive with 520RET Pumphead
Pumphead number of rollers	2
Pumphead number of channels	1
Flow rate	0.24 ml/min to 2900 ml/min
Flow rate	0 USGPH to 46 USGPH
Drive speed control ratio	2200:1
Drive speed	0.1 - 220 rpm
Operating temperature	5 °C to 40 °C (40 °F to 104 °F)
Weight	10.5 - 11.4 kg (23.2 - 25.1 lbs)
Drive weight	9.82, 10.7 kg (21.6, 23.6 lbs)
NEMA module weight	0.9 kg (1.9 lbs)
Control types	EtherNet/IP™, Profibus®, Profinet®, Remote Analogue/Digital, RS232, RS485, SCADA
Drive control options	Bp, BpN, Du, DuN, En, EnN, Pn, PnN, S, SN, U, UN
Standards	CE, cETLus, C-Tick, IRAM, NSF/ANSI 61 (for Marprene tubing and LoadSure elements), RoHS
Drive ingress protection	IP31, IP66, NEMA 2, NEMA 4X
Drive humidity	(Non-condensing) 80 % up to 31 °C (88 °F) decreasing linearly to 50 % at 40 °C (104 °F)
Drive noise	<70dBA at 1m
Max. altitude	2000 m (6562 ft)
Drive power supply	115/230 V 1ph 50/60 Hz 135 VA
Compatible tubing bore size	3.2, 6.4, 9.6 mm


## Materials of construction

	530 Drive with 520RET Pumphead
Bearings	Stainless steel
Driveshaft	Electroless nickel plated carbon steel
Drain port assembly	Hytrel, PP (polypropylene)
Drive casework	Pressure die-cast aluminium LM24
Drive casework coating	Alocrom pre-treatment, Exterior grade polyester powder coat
Guide roller assembly	MoS2 filled Nylon 6 (Nylatron)
Drive keypad/HMI	Polyester
Drive rear blanking plate	Stainless steel 304
Pumphead body assembly	Polycarbonate (PC), Polyphenylene sulphide (PPS)
Pumphead guard	Polycarbonate (PC)
Pumphead roller assembly	MoS2 filled Nylon 6 (Nylatron), Polyphenylene sulphide (PPS), Stainless steel 316
Pumphead rotor assembly	Polyphenylene sulphide (PPS), Stainless steel 316
Pumphead track	Polyphenylene sulphide (PPS)
Pumphead seals	Neoprene, PTFE
Switch-plate	Glass filled ABS plastic

Information listed covers the complete range.

For detailed specifications of individual models/components refer to user manual or contact WMFTS representative.

## Dimensions

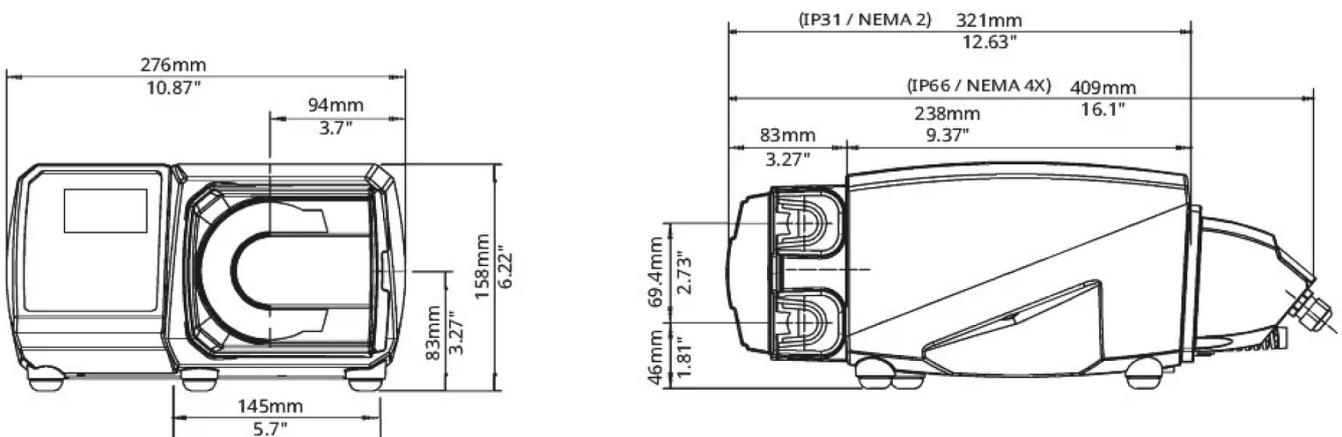

## Control options

Key to pump drive models													
530S	530SN	530U	530UN	530Du	530DuN	530Bp	530BpN	530US	530DuS	530En	530EnN	530Pn	530PnN
Standard	Standard IP66 / NEMA 4X	Universal	Universal IP66 / NEMA 4X	Digital Universal	Digital Universal IP66 / NEMA 4X	Bus Pump / Profibus	Bus Pump / Profibus IP66 / NEMA 4X	Universal SCADA / IP66 / NEMA 4X	Digital Universal SCADA / IP66 / NEMA 4X	EtherNet/IP	EtherNet/IP / IP66 / NEMA 4X	PROFINET®	PROFINET® / IP66 / NEMA 4X

Manual control																
Pump drive	530S	530SN	530U	530UN	530Du	530DuN	530Bp	530BpN	530US	530DuS	530En	530EnN	530Pn	530PnN		
Intuitive keypad and colour display	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
Choice of flowrate or speed display	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
Full calibration with choice of flow units	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
MemoDose function	✓	✓	✓	✓	✓	✓			✓	✓						
Auto restart facility	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
Leak detection	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
Dispensing (Network Control)											✓	✓	✓	✓	✓	

Remote control																
Pump drives	530S	530SN	530U	530UN	530Du	530DuN	530Bp	530BpN	530US	530DuS	530En	530EnN	530Pn	530PnN		
Configurable Start/Stop and leak detector, via contact closure or 5V TTL or 24V industrial logic***				✓	✓	✓	✓					✓	✓	✓	✓	
Pressure switch input, via contact closure or 5V TTL or 24V industrial logic***				✓		✓										
Configurable Start/Stop, leak detector and pressure switch input via 110 V industrial logic										✓	✓					
Direction change and auto/manual toggle input via contact closure or 5 V TTL or 24 V industrial logic				✓	✓	✓	✓									
Direction change and auto/manual toggle input via 110 V industrial logic										✓	✓					
Remote operation of MemoDose (foot/hand-switch or logic input)				✓	✓	✓	✓									
Four configurable digital status outputs through 24 V, 30 W relays					✓		✓									
Four configurable digital status outputs through 110 V relays										✓	✓					
Menu configurable logic outputs				✓		✓										
Remote pressure/flow sensors											✓	✓	✓	✓	✓	

Analogue speed control																
Pump drives	530S	530SN	530U	530UN	530Du	530DuN	530Bp	530BpN	530US	530DuS	530En	530EnN	530Pn	530PnN		
Fully configurable inputs; 0-10 V or 4-20 mA			✓	✓	✓	✓			✓	✓						
Analogue outputs; 0-10 V, 4-20 mA			✓	✓	✓	✓			✓	✓						
Keypad/analogue input scaling (replacement of diaphragm pumps)					✓	✓				✓						
Tacho frequency output; 0-991 Hz			✓	✓	✓	✓										
2x sensor inputs 4-20 mA or 0-1000Hz*											✓	✓	✓	✓	✓	

Security																
Pump drives	530S	530SN	530U	530UN	530Du	530DuN	530Bp	530BpN	530US	530DuS	530En	530EnN	530Pn	530PnN		
3-level Security PIN lock	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	

Network communication																
Pump drives	530S	530SN	530U	530UN	530Du	530DuN	530Bp	530BpN	530US	530DuS	530En	530EnN	530Pn	530PnN		
RS485 network control						✓				✓						
RS232 network control					✓											

Digital pump commands (Profibus / EtherNet/IP)																
Pump drives	530S	530SN	530U	530UN	530Du	530DuN	530Bp	530BpN	530US	530DuS	530En	530EnN	530Pn	530PnN		
PROFIBUS® DP V0							✓	✓								
PROFINET® (CC-B & Netload Class III)													✓	✓		
EtherNet/IP™											✓	✓				
Communication speeds from 9.6 kbits/s up to 12000 kbits/s							✓	✓								
Network speed: 10/100 Mbps - Full Duplex Operation											✓	✓				
Network speed: 100 Mbps - Full Duplex Operation													✓	✓		
Auto-detect bus speed							✓	✓								
Speed set point							✓	✓			✓	✓	✓	✓	✓	
Speed feedback							✓	✓			✓	✓	✓	✓	✓	
Flow calibration function							✓	✓			✓	✓	✓	✓	✓	
Hours run							✓	✓			✓	✓	✓	✓	✓	
Revolution counter							✓	✓			✓	✓	✓	✓	✓	
Leak detection							✓	✓			✓	✓	✓	✓	✓	
Low fluid level alarm							✓	✓			✓	✓	✓	✓	✓	
Diagnostic feedback							✓	✓			✓	✓	✓	✓	✓	
Flow Totaliser											✓	✓	✓	✓	✓	
Sensor scaling											✓	✓	✓	✓	✓	
Dispensing (Network Control)**											✓	✓	✓	✓	✓	

\*Range of 3rd party pressure/flow sensors supported—see compatible sensor list

\*\*Dispensing (Network/Manual) - Store up to 100 recipes locally or via network control. Features include volume, flow rate, anti-drip, ramp and time delays. Run these as batches using local, network or manual keypad control.

\*\*\*If you can't see the option you need, contact the engineered products team at WML to discuss

