Bredel 25

Bredel hose pumps (10-50)




Features and benefits

- Dry running and self-priming
- Suction capability up to 9.5 mWC (354 inWC)
- No seals, ball-checks, diaphragms, glands, immersed rotors, stators or pistons to leak, clog, corrode or replace
- Handles abrasive slurries, corrosive acids, gaseous liquids
- No slippage, allowing true positive displacement for accurate, repeatable metering
- No ancillary equipment, check valves, sealing water flush systems or run-dry protection required
- Fully reversible to blow out suction and drain lines safely

Bredel 25 performance



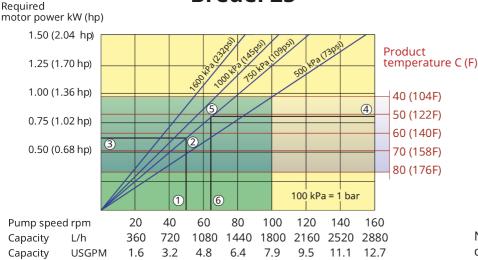

Note: The area of continuous operation temperatures. For product temperatures

- 1. Flow required indicates pump speed
- 2. Calculated discharge pressure
- 3. Net motor power required
- 4. Product temperature
- 5. Calculated discharge pressure
- 6. Maximum recommended pump speed

diminishes with increased product >40C, the area of continuous operation reduces to the corresponding red temperature line.



* Maximum 3 hours operation followed by minimum 1 hour stop

Technical specifications

Max. flow rate continuous Max. flow rate continuous Max. flow rate intermittent	1800 L/h 475 USGPH
Man flammata international	
wax. now rate intermittent	2740 L/h
Max. flow rate intermittent	723 USGPH
Volume per revolution	0.3 L
Volume per revolution	0.079 USG
Max. continuous operating speed	100 rpm
Max. intermittent operating speed	155 rpm
Max. operating pressure	16 bar
Max. operating pressure	232 psi
Max. inlet pressure	3.5 bar abs
Max. inlet pressure	51 psi abs
Max. suction capability	9.5 mWC
Max. suction capability	374 inWC
Suction capability (80% Flow rate)	9.5 mWC
Suction capability (80% Flow rate)	374 inWC
Operating temperature range	-20 °C to 45 °C
Operating temperature range	-4 °F to 113 °F
Fluid temperature range	-20 °C to 80 °C
Fluid temperature range	-4 °F to 176 °F
Min. starting torque	115 N m
Min. starting torque	1018 in.lbs
Weight	90 kg
Weight	198 lbs
Hose lubricant required	2 L
Hose lubricant required	0.53 USG
Port configurations	Down, Left, Right, Up
Compatible hose materials	CSM, EPDM, F-NBR, NBR, NBR for food, NR-Metering, NR-Transfer
Flange assembly type	ANSI, DIN, JIS


Please consult your Bredel representative for lower or higher temperature operation.

Allowable ambient temperature is based on pump capabilities and may be further limited by gearbox ambient capabilities.

Materials of construction

	Bredel 25								
Hose material	CSM, EPDM, F-NBR, NBR, NBR for food, NR-Metering, NR-Transfer								
Housing	Cast iron, ISO12944 category C4M								
Rotor assembly	Cast iron, ISO12944 category C4M								
Cover assembly	Cast iron, ISO12944 category C4M								
Brackets and fasteners	Galvanised steel, Stainless steel 316								
Support frame	Galvanised steel, Stainless steel 316								
Hose clamps	Galvanised steel, Stainless steel 316								
Seals	Nitrile								

Bredel 25 dimensions

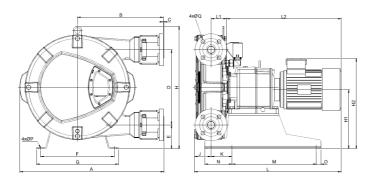

Туре	Α	В	С	D	E	F	G	Н	H1	H2max	J	K	Lmax	L1	L2max	М	N	0	ØP	ØQ	R
Bredel 25 (mm)	521	304	2.5	264	98	279	315	460	222	359	66	97	592	58	468	305	120	15	12	14	85
Bredel 25 (inches)	20.5	12	0.09	10.4	3.9	11	12.4	18.1	8.7	14.1	2.6	3.8	23.3	2.3	18.4	12	4.7	0.6	0.47	0.6	3.3
Connector sizes							F	ANSI 150#						EN DIN				JIS			
Bredel 25							1"						25mm				25mm				

Disclaimer: The information contained in this document is believed to be correct at the time of publication, but Watson-Marlow Bredel BV accepts no liability for any error it contains, and reserves the right to alter specifications without prior notice. All mentioned values in this document are values under controlled circumstances at our test bed. Actual flow rates achieved may vary because of changes in temperature, viscosity, inlet and discharge pressures and/or system configuration. APEX, DuCoNite, Bioprene and Bredel are registered trademarks.

wmfts.com/global



23 November 2023