

APEX 28

APEX hose pumps

Bredel


Hose Pumps

Features and benefits

- Seal-less, valve-less design
- Precision machined hose elements for accurate, repeatable performance
- Optimised hose compression for unmatched flow stability
- Direct-coupled drive and maximum flexibility - no separate couplings to align or maintain
- Ultra compact design with flexibility to mount standard gear motors - rotor supported by own bearings to maximise gearbox life
- Lower maintenance costs - single component change means fewer spare parts inventory



APEX 28 performance

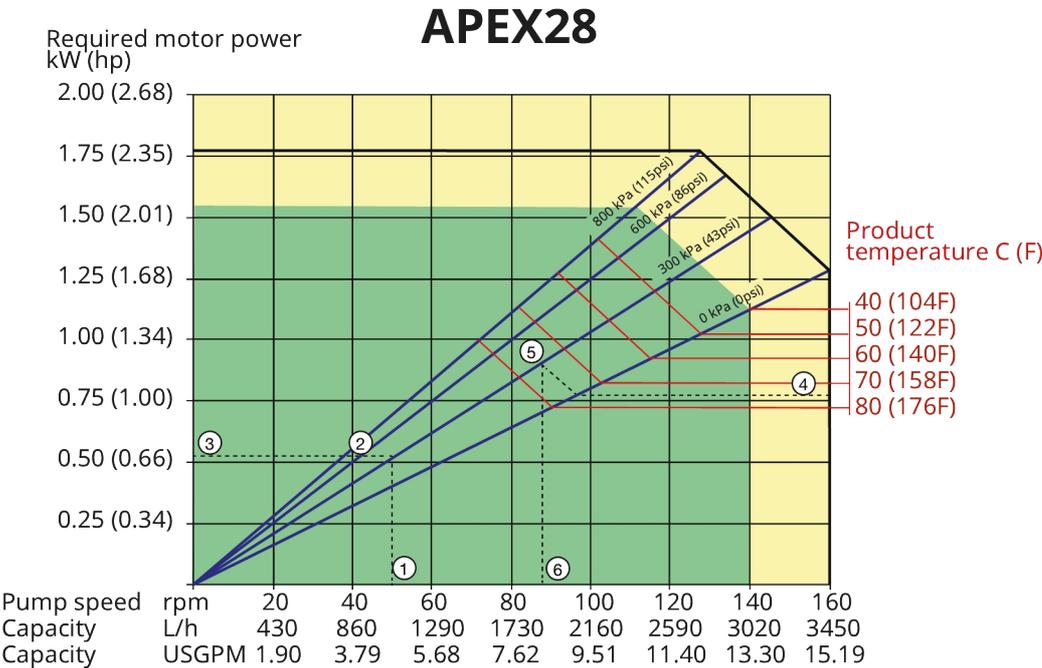

1. Flow required indicates pump speed
2. Calculated discharge pressure
3. Net motor power required
4. Product temperature
5. Calculated discharge pressure
6. Maximum recommended pump speed

- Continuous duty
- Intermittent duty

* Maximum 3 hours operation followed by minimum 1 hour stop


Technical specifications

	APEX 28
Max. flow rate continuous	3020 L/h (797 USGPH)
Max. flow rate intermittent	3450 L/h (910 USGPH)
Volume per revolution	0.36 l (0.095 USG)
Max. continuous operating speed	140 rpm
Max. intermittent operating speed	160 rpm
Max. operating pressure	8 bar (116 psi)
Suction pressure	0.05 bar abs
Suction pressure	0.73 psi abs
Max. inlet pressure	2.5 bar abs (37 psi abs)
Operating temperature	-20 °C to 45 °C (-4 °F to 113 °F)
Fluid temperature	-20 °C to 80 °C (-4 °F to 176 °F)
Min. starting torque	150 N m (1330 in.lbs)
Weight	100 kg (220 lbs)
Port configurations	Down, Left, Right, Up
Compatible hose materials	EPDM, NBR, NBR for food, NR
Flange assembly type	ANSI, DIN, JIS

Materials of construction

	APEX 28
Hose material	EPDM, Natural rubber (NR), NBR, NBR for food
Housing	Cast iron
Rotor assembly	Die-cast aluminium
Cover assembly	Die-cast aluminium
Brackets	Cast iron, Stainless steel AISI 316
Fasteners	Galvanised steel, Stainless steel AISI 316
Support frame	Galvanised steel, Stainless steel AISI 316
Coupling bush	Alloy steel
Seals	NBR

APEX 28 dimensions

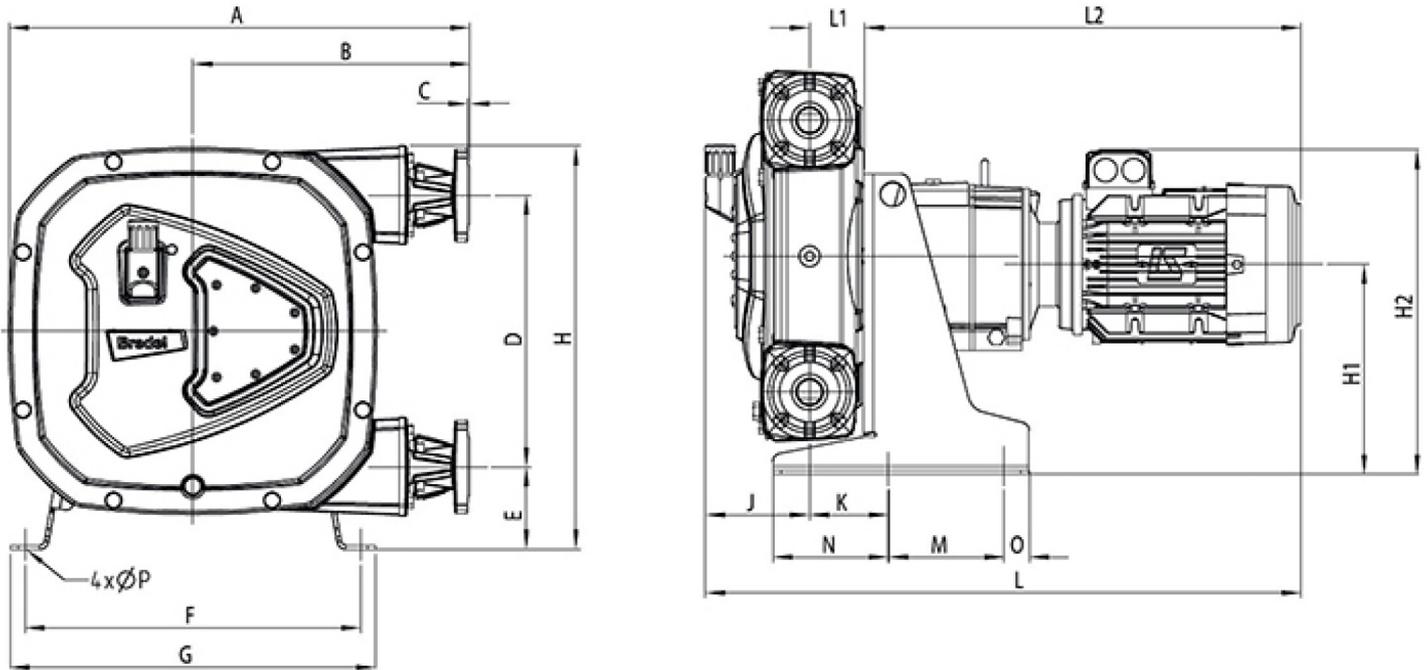

	A	B	C	D	E	F	G	H	H1	H2max	J	K	Lmax	L1	L2max	M	N	O	ØP
APEX28 (mm)	481	297	2.5	264	98	338	370	415	221	359	124	82.5	714	63	528	152	121	27	12
APEX28 (inch)	18.9	11.7	0.1	10.4	3.9	13.3	14.6	16.3	8.7	14.1	4.9	3.2	28.1	2.5	20.8	6.0	4.8	1.1	0.5
Connector sizes	ASME B16.5, 150# (ANSI)							EN 1092-1, PN40 (DIN)					JIS B2220, 10/16/20 kgf/cm²						
APEX28	DN 1"							DN 25					25mm						

Disclaimer: The information contained in this document is believed to be correct at the time of publication, but Watson-Marlow Bredel BV accepts no liability for any error it contains, and reserves the right to alter specifications without prior notice. All mentioned values in this document are values under controlled circumstances at our test bed. Actual flow rates achieved may vary because of changes in temperature, viscosity, inlet and discharge pressures and/or system configuration. APEX, DuCoNite, Bioprene and Bredel are registered trademarks.



wmfts.com/global
11 July 2025