



## Qdos mounting solutions

### Features

- Plug and Play system
- Fully functional chemical feed skid enclosure
- Accommodates all Qdos pump models

(Model shown: Single Qdos Pod)

### Design

- Floor, wall or tote mount
- 26"W x 20"H x 16"D
- Standard 125ml (or 500ml) calibration column, pressure gauge isolator, pressure relief valve and piping. Other configurations available
- Hinged clear polycarbonate cover
- Air flow assists in heat dissipation
- Standard ½" FNPT inlet/outlet connections
- PVC piping, Viton O-rings and PE tubing

### Operation

- Allows operators to properly calibrate the pump
- Side exit pumphead access panel
- Pressure relief valve ensures pump and piping are protected against over-pressure

### Safety

- Protects equipment from environmental conditions
- Secondary containment protects operators


### Quality

- Three year warranty




### Single Qdos enclosure, no pipework

Dimensions: 16"W x 21"H x 16.5"D  
Part number: WM.1362

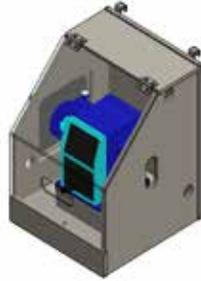

### Dual Qdos enclosure, no pipework

Dimensions: 26.1"W x 22.25"H x 16.5"D  
Part number: WM.1256

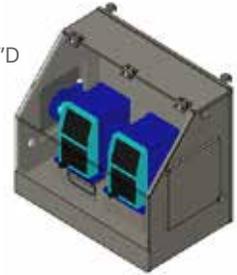

### Single Qdos Pod

Dimensions: 26"W x 20"H x 16"D  
Part number: WM.1235 (125ml)  
Part number : WM.1212 (500ml)




### Dual Primary/Backup Qdos Pod

Dimensions: 55.19"W x 22.25"H x 19.5"D  
Part number: WM.1237



### Dual discharge Qdos Pod

Dimensions: 54.19"W x 22.25"H x 19.5"D  
Part number: WM.1292

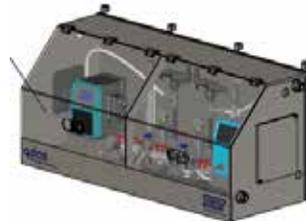


### Single Qdos wall mount shelf

Dimensions: 8"W x 8"H x 9.51"D  
Part number: WM.1287



### Single Qdos tote mount shelf

Dimensions: 8"W x 20"H x 9.5"D  
Part number: WM.1553

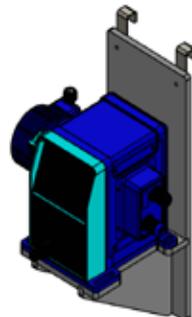

### Dual Qdos tote mount shelf

Dimensions: 22"W x 20"H x 9.5"D  
Part number: WM.1554

